

**Part Number:** D-1098S-7-F

**Description:** Front Saddle

**Fitment:** 2007 Ducati 1098 & 1098 S

**Revision:** 1



Tools Required	Parts List
3mm Allen Key 6mm Allen Key	1 #A00932 Mounting Bracket



1. Remove your stock seat using a 3mm Allen key. Refer to your owner's manual if necessary.

2. Remove the two bolts holding the rear foot pegs, using a 6mm Allen Key. (Figure 1)

3. Install Corbin mounting bracket and secure with the stock bolts. (Figure 2) Use Loctite® and tighten to 10 ft. lbs.

4. To install, slip the two front tongues of your saddle under the rear of the gas tank, align the Corbin latch pin and push down on the saddle until you hear the lock click. (Figure 3)

5. To remove, just turn the provided key to release the lock.

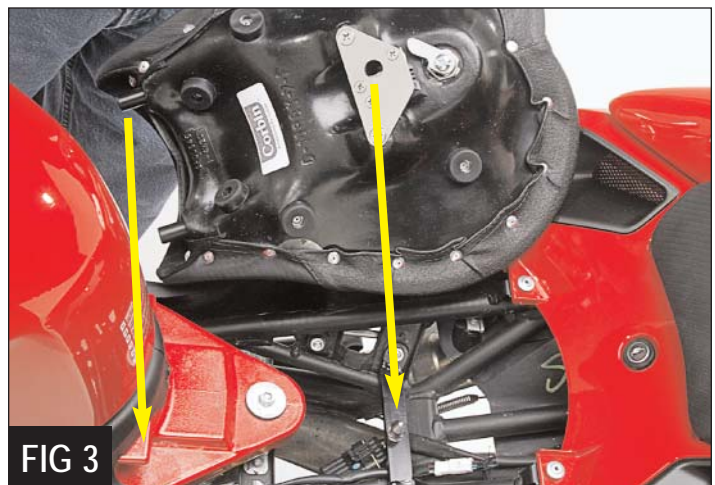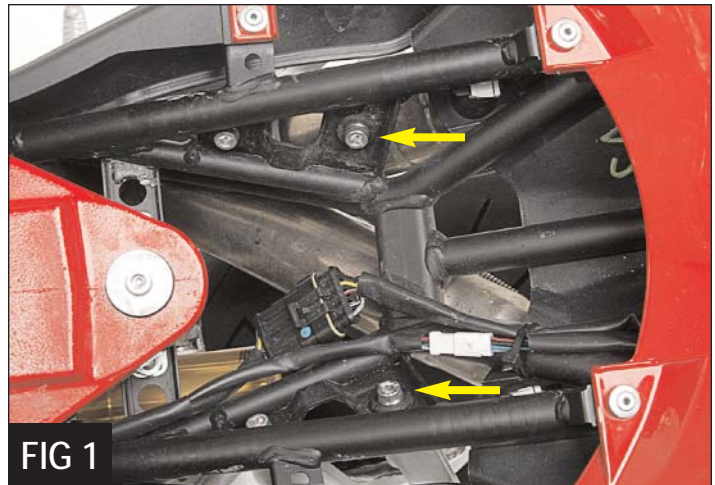

Questions? Give us a holler...  
**800-223-4332**  
tech@corbin.com