

Part Number: HW1202C

Description: Media Player

Fitment: Corbin Fleetliner Fairing

Revision: 1



Tools Required	Parts List
4 mm Allen wrench 5 mm Allen wrench 3/8" Open wrench #2 Phillips screwdriver 1/4" Round file	2 Temporary spacers 1 MP3 Connector 1 Wire harness 1 Large 25 amp fuse 3 6m x 1.25 x 30m Chrome button head Allen bolts 5 8" Zip ties 5 6" Zip ties 1 2" x 2" Male Velcro

NOTE: We recommend the use of Loctite® or other thread-lock material when assembling parts on your motorcycle.

1. Start by removing the fairing on the motorcycle, leaving the fairing mounting brackets installed on the front end of your bike.

2. To remove the fairing, remove the four 8mm x 1.25 x 40mm chrome Allen bolts. Keep these bolts handy as you will be reusing them.

3. Once you have the fairing removed, find a soft surface where you can lay it down on (blanket on a table works great). Next, remove the ABS cover, chrome strip and the windshield, using a 4mm Allen wrench. (Figure 1)

NOTE: You will NOT be reusing the ABS cover, washers or bolts, but keep the windshield and the chrome strip handy as they will need to go back on the fairing.

4. To install the media player system, place the fairing face down on a soft surface, then place the media player system on top of the fairing (Figure 2). Line up the holes on the media player bracket with the mounting locations on the fairing. Secure with the supplied temporary spacers and two of the 8mm x 1.25 x 40mm chrome button head Allen bolts that you removed from the fairing (Figure 3).

NOTE: Do not tighten them down all the way. You just want to get them started enough so they do not slip out while you keep assembling the rest of the media player.

5. For the next step you might need a second pair of hands to hold the fairing up while you align the parts and bolt them together.

6. Start by standing the fairing up with the Mp3 system facing up. The two mounting locations with the spacers, should be enough to hold the Mp3 system to the fairing and at the same time, loose enough so you can line up the threaded Mp3 bracket with the holes where the windshield goes.



FIG 1



FIG 2

NOTE: You will want to do a quick test to make sure the mounting locations line up correctly before trying to put the chrome strip and the windshield on.

7. Start with the center hole first. Line it up and screw in the provided 6mm x 1.25 x 25mm chrome Allen bolt. Then do the left and right side (*Figure 4*). If the holes do not align properly, you will need to open the holes a bit so they line up. For this, you can use a 1/4" round file or you can use a 8mm bit and drill them out. Use some masking tape around the holes to protect the paint from any unwanted drill or file marks. Before filing, remove the Mp3 system, keeping it away from any debris. After filing the holes, recheck the alignment.

8. After you check the alignment, remove the bolts and re-install the chrome strip to the fairing, securing it to the Mp3 bracket (*Figure 5*). Do this by putting the chrome strip in place, then, using the 6mm x 1.25 x 25mm chrome Allen bolts, screw on the center bolt, but do not tighten. Next, get the left and the right bolts started. Once you have all the bolts started, screw them in enough to stay in place, but loose enough to slide the windshield in between the Mp3 bracket and the fairing. Use Loctite® on the bolts before screwing them in.

9. Next, slide the windshield in place (*Figure 6*). Then, start tightening all three bolts a little at a time, while moving the windshield a bit so the Mp3 spacer can fall in the windshield slots. Once in place, tighten all three bolts.

NOTE: Do not over tighten the bolts as it can damage the chrome strip. The thread lock product you put on the bolt threads will keep it secured.

10. Remove the two temporary spacers that was used to secure the media player to the fairing in step 4.

11. Re-install the fairing back onto the motorcycle.

NOTE: The spacers you used to install the Mp3 system in step 4 are the same length as the spacers on the fairing mounting brackets. When you put your fairing in place, align the fairing mounting bracket between the fairing and the Mp3 mounting bracket. Reuse the same 8mm x 1.25 x 40mm chrome Allen bolts that you removed in step 2 and secure the fairing in the same four locations. Tighten to 10 ft. lbs. and don't forget to use loctite.

12. Next step is to add the power harness (+ & -) to your bike, so your Mp3 can have power.

13. The system you just installed, will have the plug in outlet to your left side if you are sitting on the bike. The female plastic plug will need to end up on the left side of the fairing mounting bracket (*Figure 7*). The two metal connectors with the fuse will need to connect to the motorcycle battery. The Red wire with fuse goes to the positive (+) and the Black wire goes to the negative (-). Use the five 6" and 8" zip ties to secure the harness to your bike. Once everything is connected and zip tied, slip the fuse in place.



FIG 3



FIG 4



FIG 5



FIG 6

14. Last, but not least, you need to prep your Mp3 player. Put a piece of the provided male velcro onto your Mp3 player (*Figure 8*). This will enable your Mp3 player to stick onto the female velcro of the Mp3 pocket, located on the left side of your system. This will help prevent your Mp3 from bouncing around.

15. You are now ready to enjoy your system. Connect your Mp3 player to the provided location under the belly of the system with the provided connector (*Figure 9*). Turn your Mp3 player on and sit it in the pocket. Turn your system on by pushing the small black button on the left. The red light will flash to let you know it's on. The control knobs from left to right are Volume, Base and Treble (*Figure 10*).

NOTE: If your Mp3 is not charged, you can connect it to the charger on the system. Wire NOT included.

16. Test your Tunes out. If everything sounds great, go ahead and reinstall any other items back on your motorcycle.

Things to watch for to get the best results and safety.


1. Determine where your battery is located and plan the best route possible that will be safe from any damage and out of sight.

2. Start the installation at the top of the left side, mounting fairing bracket. Plug in the connector to the Mp3 system and route it down along the mounting bracket and into the motorcycle chassis.

NOTE: Before you secure it with zip ties, make sure to turn the forks all the way to the left then to the right, to make sure wire has correct length and free from any potential damage. Then go back and secure it with the provided zip ties.

3. Connect the three ends of the wire harness, then slip the fuse in. This will prevent any potential damage while installation is taking place.

4. Review the recommended tool list to assure a prompt and easier installation process.

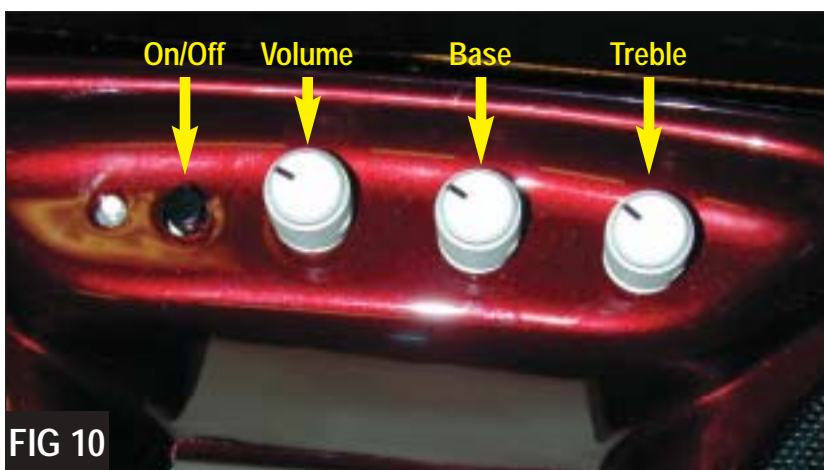

Questions? Give us a holler...
800-223-4332
tech@corbin.com