

Part Number: BMW-K12-GT-F, BMW-K12-GT-R &
BMW-K12-GT-SMUG



Description: Front, Rear & Smuggler Saddles

Fitment: 2006 BMW K1200 GT


Revision: 1

Tools Required	Parts List
5/16" Allen Wrench	FRONT SADDLE: All brackets preinstalled REAR SADDLE & SMUGGLER: 1 #A00846 Mounting bracket 2 m6 x 20 Allen bolts

NOTE: We recommend the use of Loctite® or other threadlock compound when assembling parts on your motorcycle.

NOTE: Corbin's front and rear saddles **DO NOT** work with your stock BMW seats.

1. Remove the stock seat(s) from your bike.
2. Remove the two stock bolts on the chassis. (Figure 1)
3. Install the Corbin mounting bracket where you just removed the OEM bolts, by using the supplied m6 x 20 Allen bolts. Tighten to 8 ft. lbs. and don't forget to use Loctite®. (Figure 2)

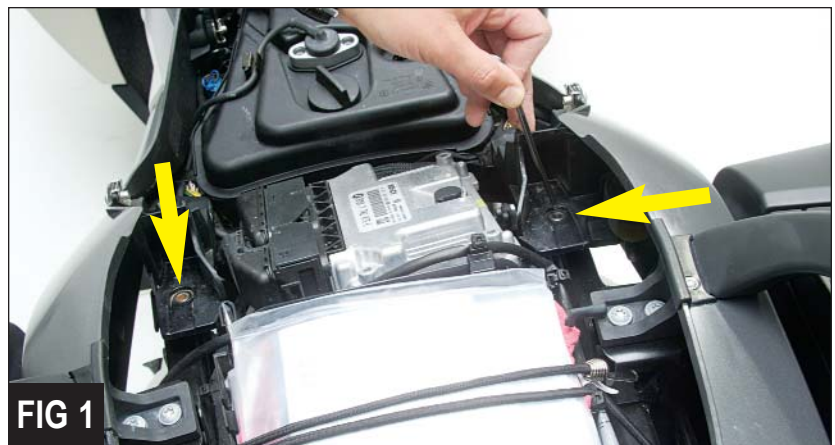

4. **Front Saddle:** Slide the front tongue into the bracket at the base of the gas tank.

NOTE: Front saddle will be secured when the rear saddle or smuggler are installed.

5. **Rear & Smuggler Saddle:** Slip the front tongues under the bracket you just installed, align with rear lock and push down. (Figure 3)
6. To release the rear saddle & smuggler, just use the stock key.



Questions? Give us a holler...
800-223-4332
tech@corbin.com