

**Part Number:** D-MULTI-3

**Description:** Canyon Dual Sport

**Fitment:** `03-`08 Ducati Multistrada 1000DS

**Revision:** 1



Tools Required	Parts List
3/16 Allen Wrench 13mm Open End Wrench (Additional tools will be needed for the removal of the stock seat)	Part # A000524 - 1 U-shaped Bracket (Figure 1) 2 1/4 x 20 x 3" Allen Bolts 2 1/4" Flat Washers 2 1/4" Lock Washers 2 T=1/4-20 T-Nuts

1. Begin by removing the front and rear stock seat (refer to owner's manual).



**NOTE:** In the design stages of these seats, we found the procedure of removing the stock seat is of an advanced level. You may want to go to your local Ducati Dealer's service department for additional assistance.

The removal process of the stock seat will allow access to the attachment points to install the U-shaped bracket for your Corbin Saddle to the bike. Once you have gained access to the attachment points from the removal of the stock front seat, the attachment points for the Corbin U-shaped bracket can now be secured in place.

**NOTE:** We highly recommend using a medium strength thread lock product, such as Loc-tite®, on the bolts when installing your bracket.

2. The bracket will mount at the same place as the original front seat was attached. Line up the bracket with the longer edge towards the rear of the bike. Place the 3" bolts into the holes with a lock washer and flat washer in place. The bolt will meet up with the T-nut under the frame, securing the bracket (Figure 2). Tighten the allen bolt snugly in place.

**NOTE:** Watch as the T-nut is tightened. Don't overtighten it to the point the base of the T-nut begins to bend upwards into the shaft. Use the 13mm wrench to prevent the T-nut from turning as you tighten them up to the allen bolts.

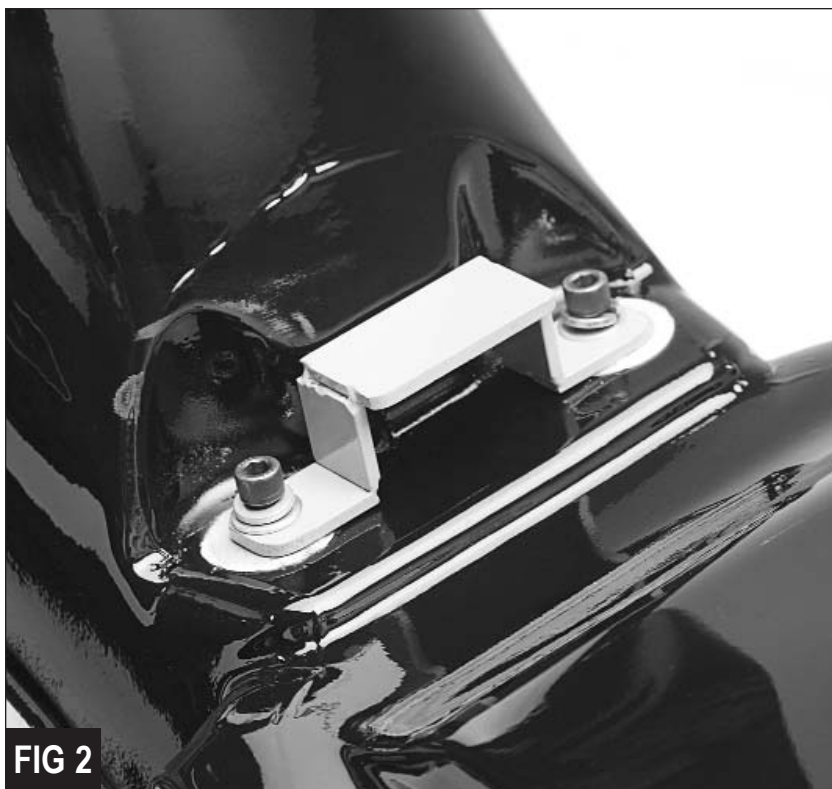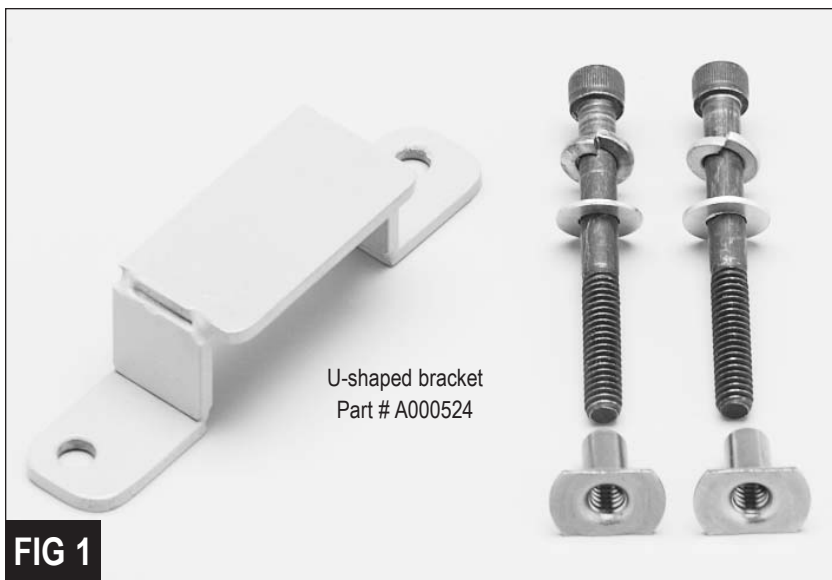


3. Now the body can be secured and the panels can be replaced reversing the disassemble of the bike for seat removal. At this point you're ready to install your new Corbin Saddle.

4. Slide the front tongue of the saddle into the U-shaped bracket you've just installed. Push down at the rear of the saddle to latch it into place.

**NOTE:** To prevent damaging the seat or key while installing or removing your Corbin Saddle, remove the key from the bike.

5. Take it for a test ride...Enjoy!

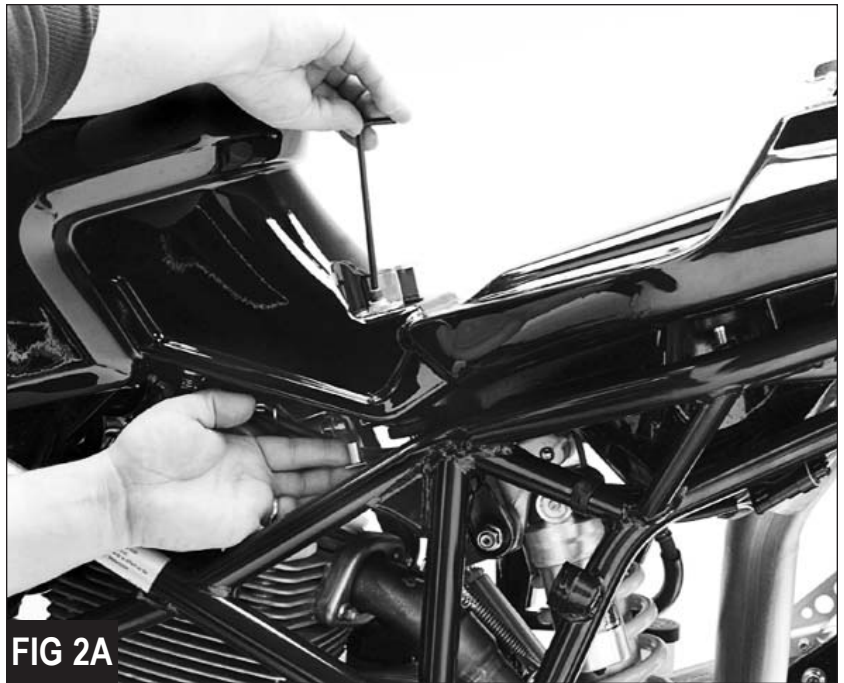

Questions? Give us a holler...  
**800-223-4332**  
tech@corbin.com