

Part Number: DM9-7-F, DM9-7-R & DM9-7-SMUG

Description: Front Saddle, Rear Saddler & Smuggler

Fitment: 2007 Ducati Monster

Revision: 1



Tools Required	Parts List
10mm Open Wrench 7/16" Open Wrench 13mm Open Wrench	1 #P00260 Bracket

1. Remove your stock seat. Refer to your owner's manual if necessary.

2. Saddle mounts just like stock with brackets preinstalled on the saddle.

NOTE: If the rear saddle or smuggler bracket isn't secured to the front saddle, secure the two together with the supplied 8mm hex head bolt and flat washer. Use Loctite® and tighten to 8 ft. lbs. (Figure 1)

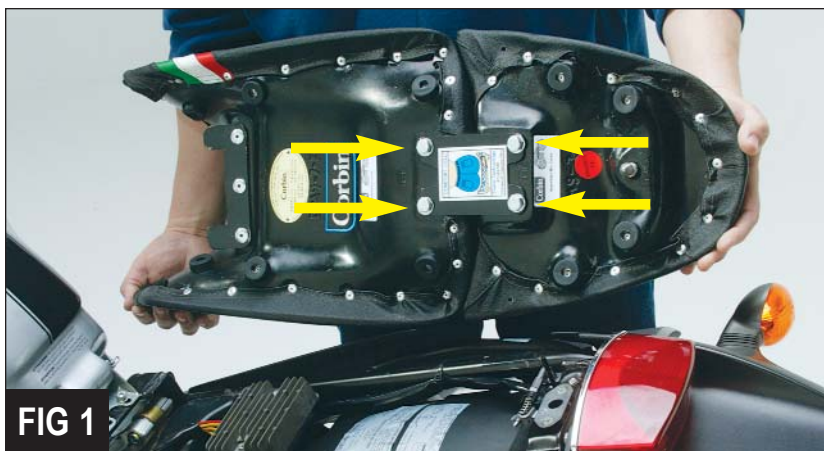


FIG 1

3. To install, slip the two front tongues of your saddle under the rear of the gas tank, align the Corbin latch pin to the stock bracket and push down on the saddle until you hear the lock click. (Figure 2)



FIG 2

4. Corbin's rear saddle works with your factory seat cowl. To install, slide the cowling onto the rear saddle and secure with the supplied 6mm hex head bolts and flat washers. (Figure 3)

NOTE: Bolts and flat washers for the seat cowling should already be preinstalled onto the rear saddle.

5. To remove, just turn the stock key on the side of the bike to release the lock.

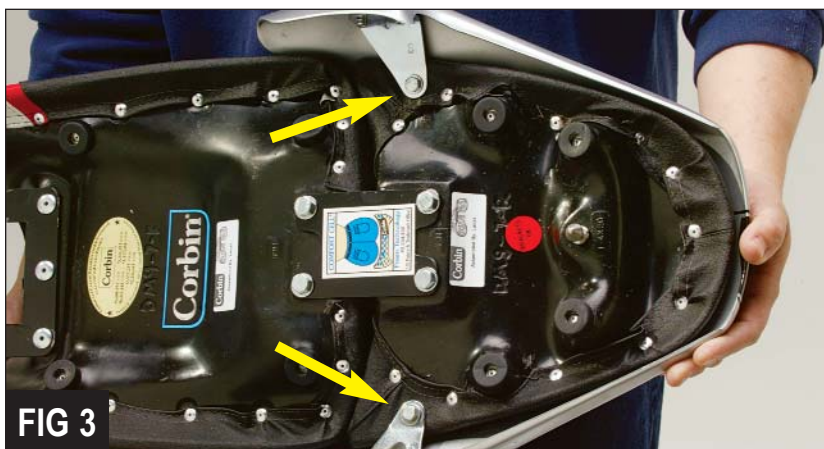


FIG 3

Questions? Give us a holler...
800-223-4332
tech@corbin.com