

Part Number: HD-ST-6-CHIN

Description: Chin Spoiler

Fitment: 2006 & Up HD Softail models


Revision: 1



Tools Required	Parts List
5/32" Allen Wrench 3/16" Allen Wrench Side Cutters or scissors Philips head screwdriver	Regulator relocation bracket #P10258 1 1/4" x 20 Speed Nut 1 1/4" flat washer 2 5/16" x 18 x 1 Chrome Button head bolts 2 5/16" flat washers 1 1/4" x 20 x 1.5 Chrome Buton head bolt 1 1/4" x 20 x 3/4 flat head screw 1 6" Zip tie

NOTE: We recommend the use of a thread lock product such as Loctite® when assembling parts on your bike.

1. If equipped, remove the stock regulator cover and associated brackets.
2. CVO Models ONLY: Remove the regulator and it's bracket from the front of the engine. Reinstall the regulator using the Corbin bracket as shown in Figure 1. Use the flat head screw into the block at "A" and reuse the stock regulator screws at points "B".
3. Remove the clutch cable clamp from the frame downtube as shown in Figure 2. Secure the cable directly to the frame tube with the included zip tie as shown in Figure 3. Trim away spare zip tie.
4. Install the speed nut onto the frame cross support as shown in Figure 4. Place it so the threaded end is on the back and facing the motor.
5. Locate the Chin Spoiler into position and hold with the included 1/4" x 20 Chrome button head bolt and flat washer through the spoiler and into the speed nut. Apply Loctite, but do not tighten this one yet. Refer to Figure 5.
6. Secure the bottom of the Chin Spoiler to the foot-peg mounts as shown in Figure 6. Notice the chin is

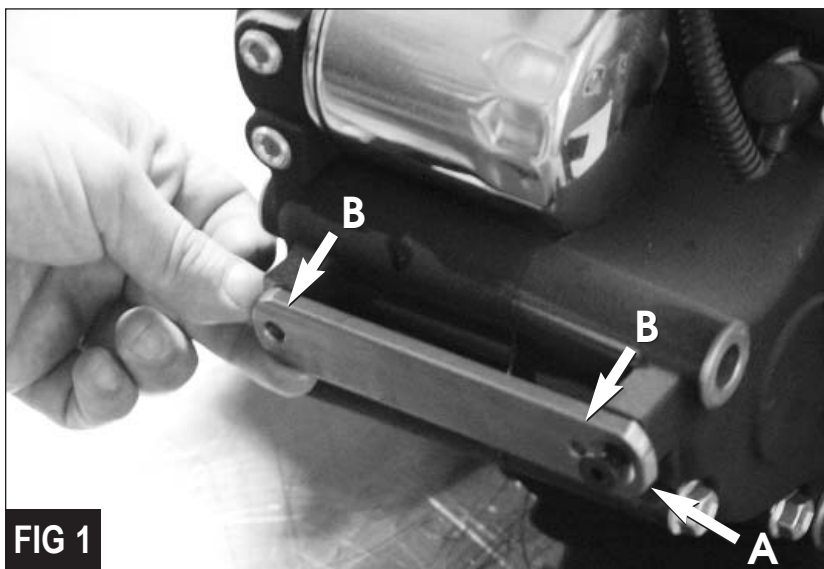

located between these brackets. Secure in place with the included 5/16 x 18 chrome button head bolts and chrome washers. Use Loctite here as well.

7. Tighten all three mounting locations to 6 ft lbs.



Questions? Give us a call!
800-223-4332
daytona@corbin.com