

**Part Number:** HD-VR-BAG

**Description:** Beetle Bags

**Fitment:** 2002+ Harley-Davidson V-Rod



**Revision:** 1



Tools Required	Parts List
10mm socket and 10mm combination wrench 13mm socket or combination wrench 14mm socket or combination wrench 4mm hex key (allen wrench) 5mm hex key (allen wrench) Loctite® or similar product	Left side bracket (Figure 1, A) Right side bracket (Figure 1, B) Rear brace (Figure 1, C) 2 Flat head allen screws 2 m8 x 1.25 x 20 Hex Head bolts 2 m8 flat washers 6 3/8" flat washers (shown on bracket studs) 6 3/8" lock washers (shown on bracket studs) 6 3/8" x 16 Chrome Acorn nuts

**NOTE:** We recommend the use of a thread lock product such as Loc-tite® when assembling parts on your motorcycle.

1. Remove seat.
2. Remove the side reflectors from the License plate mounting bracket just in front of the rear turn signals.
3. Refer to Figure 2 and remove the turn signal module and mounting clip. Just take off the two nuts shown using a 10mm wrench.
4. Remove the rear fender cover and luggage rack (if you have one installed). There are six bolts that need to be removed and they are shown by the arrows in Figure 3. When all bolts are removed, lift the fender cover carefully and unplug the Tail / Brake light.
5. Now refer to Figure 4 and remove one bolt from each side of your license plate mounting bracket. Remove the rearmost one on each side. This is a bolt & nut combination so you will need two wrenches. Keep the bolts for further use and set aside the nuts.
6. You are now ready to install the saddlebag side mounting brackets. They are stamped "L" & "R" to signify which side it installs on.

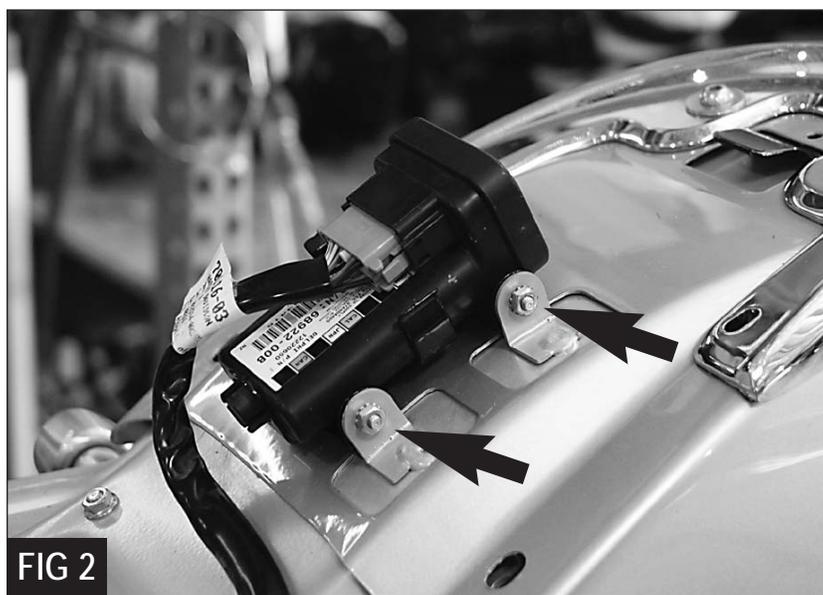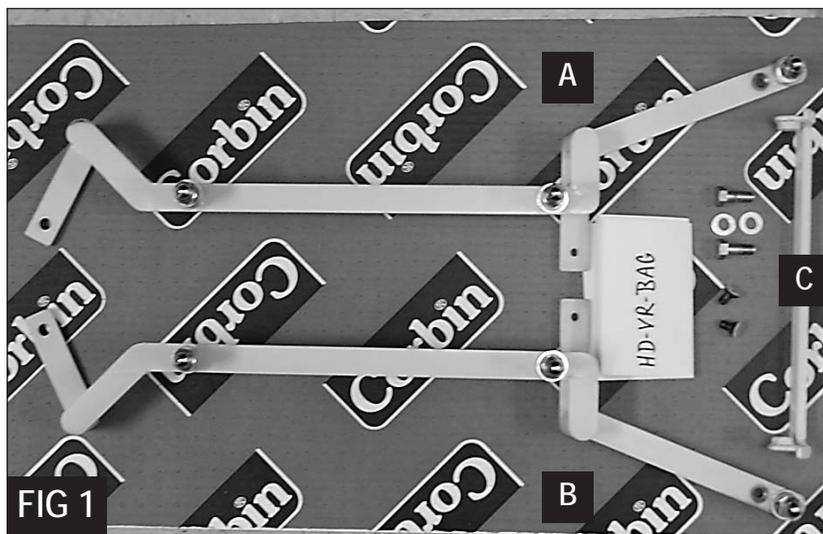

7. Refer to Figure 5 for side bracket installation. There are two positions in which each bracket is bolted to your chassis:

- a) Secure the rear of the bracket using the original bolt through the license plate mount and into the threaded hole in the Corbin bracket.
- b) Secure the front of the bracket using the supplied m8 x 1.25 x 20 with a flat washer from the INSIDE, through the bracket and into the threaded hole that exists in the chassis already.

**NOTE:** Be sure to position the side brackets on the inside (towards the tire) of the fender.

**NOTE:** Be sure to use Loctite on these bolts.

8. Install the second side bracket on the other side of the motorcycle.

9. Install the rear brace between the two side brackets as shown in Figure 6. Note the position of the alignment tabs on TOP. Secure with the supplied flat head screws.





10. Reinstall your fender and rack (if equipped).

11. Reinstall turn signal module.

12. You are now ready to mount the bags on the bike. Remove the washers and acorn nuts from the studs on the side brackets if you have not already done so.

13. Slide the bags onto the mounting studs and secure with a flat washer, then a lock washer followed by a Chrome Acorn nut. Tighten these all securely and don't forget the Loctite!

14. Reinstall your seat and you're ready to roll.

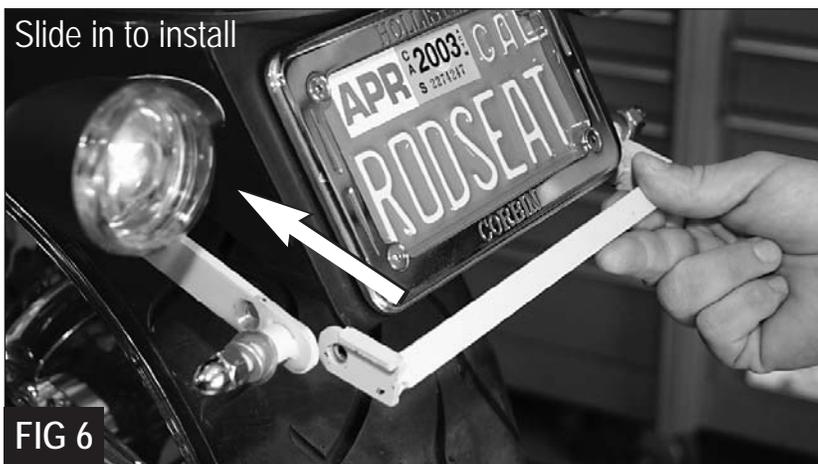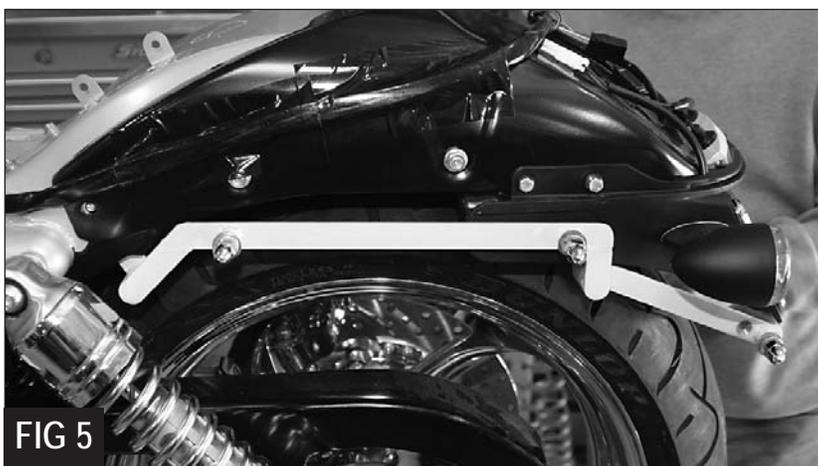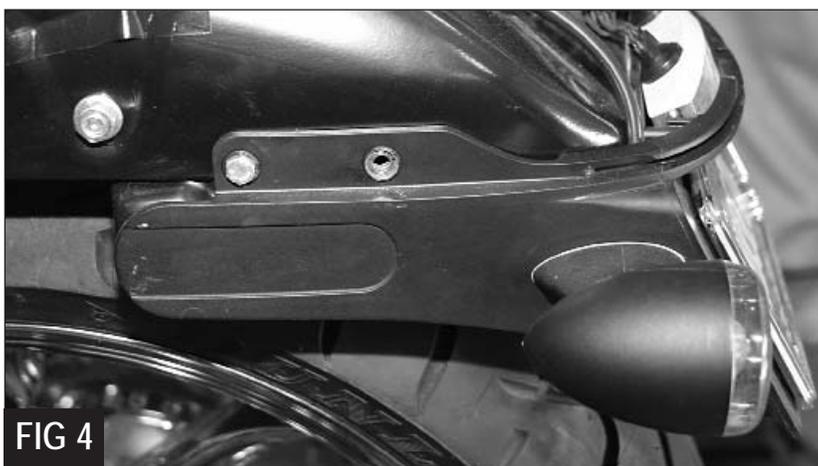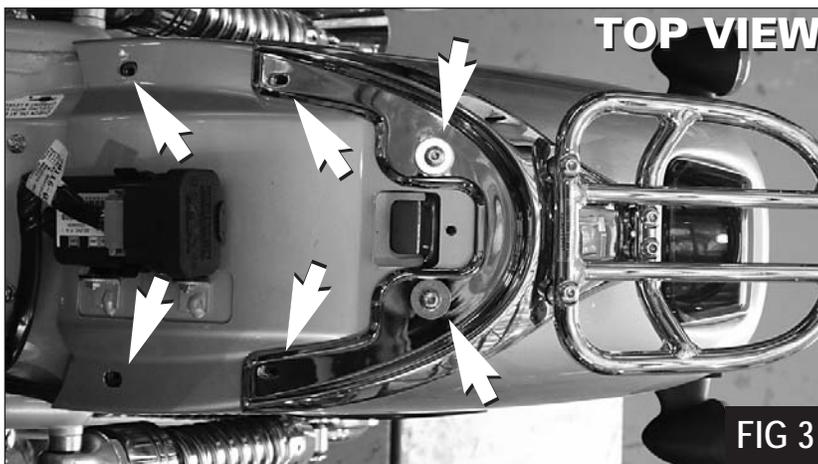

Questions? Give us a holler...  
**800-223-4332**  
tech@corbin.com