

Part Number: H-FURY-BAG

Description: Saddlebags

Fitment: 2009 Honda Fury

Revision: 1



Tools Required	Parts List
4mm Allen key 5mm Allen key 12 mm Open wrench 13mm Open wrench 9/16" combination or open wrench Pen or pointed tool Loctite® or similar	1 #A01112 Left subframe & taillight mounting bracket 1 #A01113 Right subframe & taillight mounting bracket 1 #A01114 Left footpeg mounting bracket 1 #A01115 Right footpeg mounting bracket 1 #P10451 Rear mounting bracket 4 3/8" Chrome acorn nuts 4 3/8" Flat washers 4 3/8" Lock washers 4 6m x 1.0 x 12m Flat head Allen bolts 4 8m x 1.25 x 10m Hex head bolts 4 8m Flat washers

NOTE: We highly recommend using a medium strength thread lock product, such as Loctite®, on all of the bolts when installing your Corbin saddle.

1. Start by removing your stock seat. See owner's manual if necessary

2. In order to install the Corbin brackets, you first need to remove the fender. To do this, remove the three bolts on the fender and the two plastic pins (*Figure 1*).



FIG 1

NOTE: Use a pen or pointed tool to remove the plastic pins (*Figure 2*).

3. Remove the fender (*Figure 3*).

4. Using a 5mm Allen key, remove the two Allen bolts on the subframe and tail light frame (*Figure 4*).



FIG 2



FIG 3

5. Install the Corbin bracket where you just removed the Allen bolts, securing with the supplied flat head Allen bolts, using a 4mm Allen key (*Figure 5*). Tighten to 10 ft. lbs. and use Loctite®.

6. Remove the footpeg mounts using a 12mm open wrench (*Figure 6*).

7. Remove the pin on the footpeg and transfer the footpeg onto the Corbin bracket, securing with the stock pin (*Figure 7*).

NOTE: Make sure the long edge of the footpeg is facing downwards (*Figure 8*).

8. Install the Corbin bracket with stock footpeg and secure with stock bolts (*Figure 9*). Tighten to 12 ft. lbs.

9. Repeat on the other side.


10. Put the fender back in place and secure with the stock bolts and plastic pins.

11. Mount the saddlebags and secure with the supplied flat washer, lock washer and acorn nuts (*Figure 10*). Snug the bolts into place, but do not tighten yet.

12. Install the rear mounting bracket using the supplied hex head bolts and flat washer (*Figure 11*).

NOTE: For clarity, we are showing with one bag off.

13. Next, go back and tighten all the bolts.

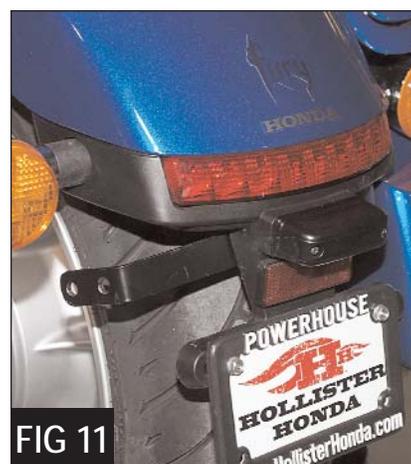

Questions? Give us a holler...
800-223-4332
tech@corbin.com