

Part Number: I-SCT-DT-E2

Description: Dual Tour Saddle

Fitment: 2015-2023 Indian Scout

Revision: 1

Corbin

Tools Required	Parts List
10mm Socket Wrench	1 #I-SCOUT-FUSE-L Wiring Harness

1. Begin by removing your stock seat(s). Refer to your owners manual if necessary.

2. Cut and peel back the shrink tubing to expose the female connector (*Figure 1*) and then insert it into the Corbin adapter (*Figure 2*).

3. Using a 10mm combination wrench, disconnect the battery negative terminal and then attach the ground wire to the battery (*Figure 3*).

4. Plug the harness you just installed (*Figure 4*), into the wiring pigtail on the Corbin saddle (*Figure 5*). Flip the switch on the saddle. If the switch illuminates, the saddle heater is working.

NOTE: The heater is controlled by the switch along the side of the saddle. The temperature is regulated by an internal thermostat when the heater switch is turned on.

5. To install your dual tour saddle, tuck the wires away to prevent them from pinching, then slide your seat nose first, towards the rear of the gas tank, engaging the tab under the chassis. Then slowly lower the seat down and secure the rear tab to the fender, using the stock bolt or as shown here, a Billet Thumbscrew (sold separately).

Figure 6.

Enjoy your new saddle!

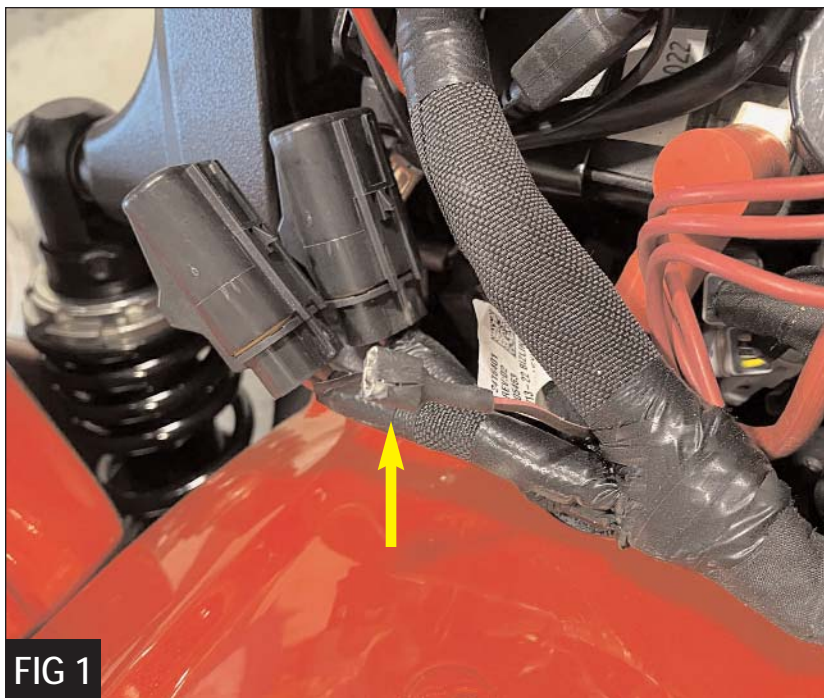


FIG 1

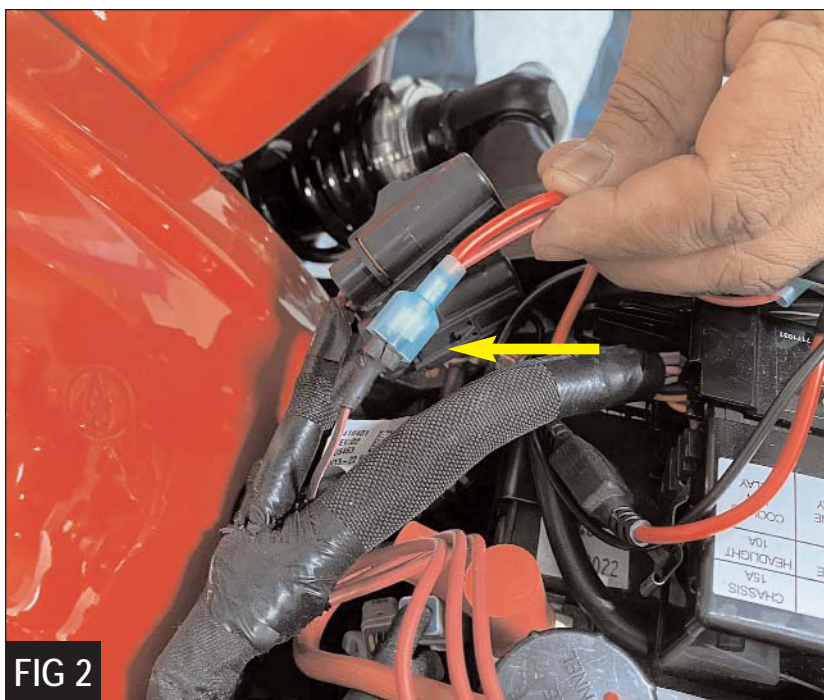


FIG 2

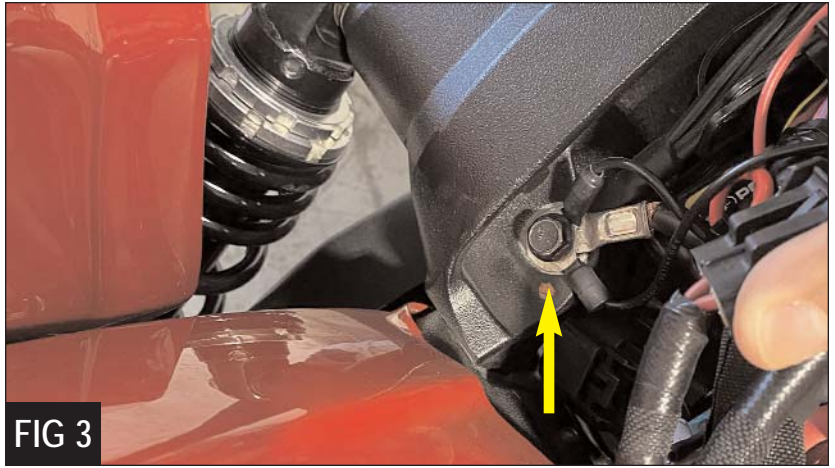


FIG 3



FIG 4



FIG 5



FIG 6



Questions? Give us a holler...
800-223-4332
tech@corbin.com