

Part Number: K-650R-6-F, K-650R-6-R & K-650R-6-SMUG

Description: Front, Rear & Smuggler Saddle

Fitment: 2006 Kawasaki 650 R

Revision: 1



Tools Required	Parts List
10mm socket or Combination wrench Loctite® or similar	1 #A00742 Front Mounting Bracket 1 #P10227 Rear Mounting Bracket (top of sub-frame) 1 #P10226 Rear Mounting Bracket (under sub-frame) 4 6mm x 20mm hex head bolts 4 6mm flat washers

NOTE: We recommend the use of Loctite® or other threadlock compound when assembling parts on your motorcycle.

1. Remove stock seat.

2. Start by removing the bolts holding the helmet hook cables and put the cables onto the hook. The hook is by the bolts you just removed (*Figure 1*).

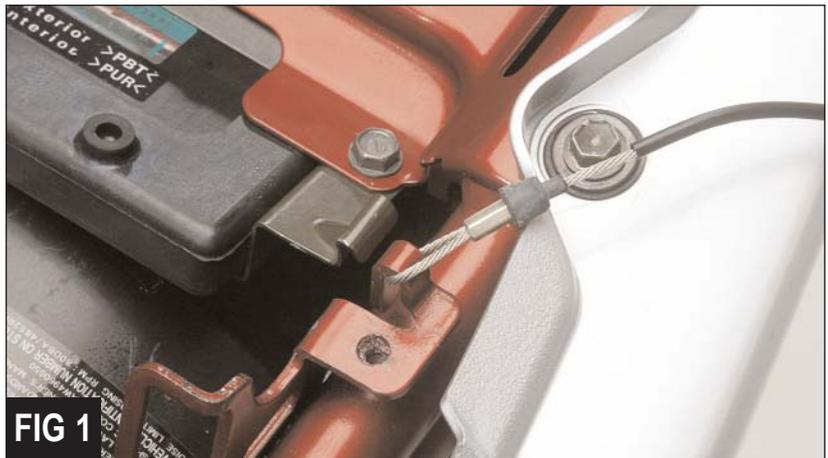


FIG 1

2. Install the Corbin bracket (#A00742) on your motorcycle as shown in *Figure 2*. Use the included 6mm hex head bolts with a flat washer on each. Tighten to 8 ft. lbs. Don't forget the loctite!

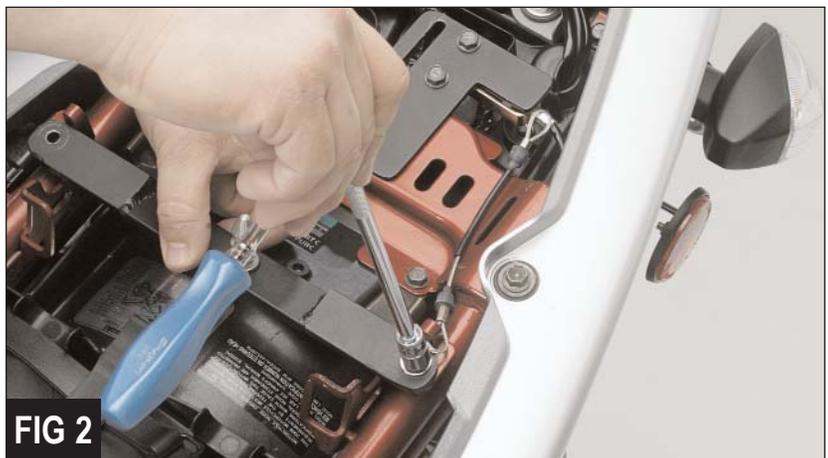


FIG 2

3. **Front Saddle:** The front saddle secures to the bike with a tongue in the front and latch mechanism in the rear. Simply slide the saddle into place nose-first then lower onto the latch pin. Push down until you hear ONE click. To remove, just squeeze the tab to release the lock. (*Figure 3*)

4. To install the rear mounting bracket, start by removing the two bolts holding the lock bracket. Slide the lock to the left to get out from under the sub-frame (*Figure 4*). Slide Corbin's rear mounting bracket #P10226, under the sub-frame where the lock used to be and position the Corbin lock bracket #P10227 on top of the sub-frame and secure with the supplied 6mm hex head bolts and flat washers. Tighten to 8 ft. lbs. (*Figure 5*)



FIG 3

5. Install the lock to the Corbin bracket you just installed, using the stock bolts. (*Figure 6*)
Tighten to 8 ft. lbs.



4. **Rear & Smuggler Saddle:** If you will be using the rider's backrest on the rear saddle, install it before latching seat to bike. There is a safety screw that must be installed and you cannot reach it with the seat mounted on. The rear & smuggler saddles installs with two adjustable tongues in the front and latch in the rear. Slip the front tongues under the bracket you just installed, align with rear lock and push down.

NOTE: If the rear or smuggler saddle doesn't lock, push the seat forward, then push down.

NOTE: When installing the smuggler saddle, open the lid to the smuggler, then push down on the base to lock in place.

5. To release the rear saddle & smuggler saddle, use the stock key on the left side of the bike.

Enjoy your new saddle!

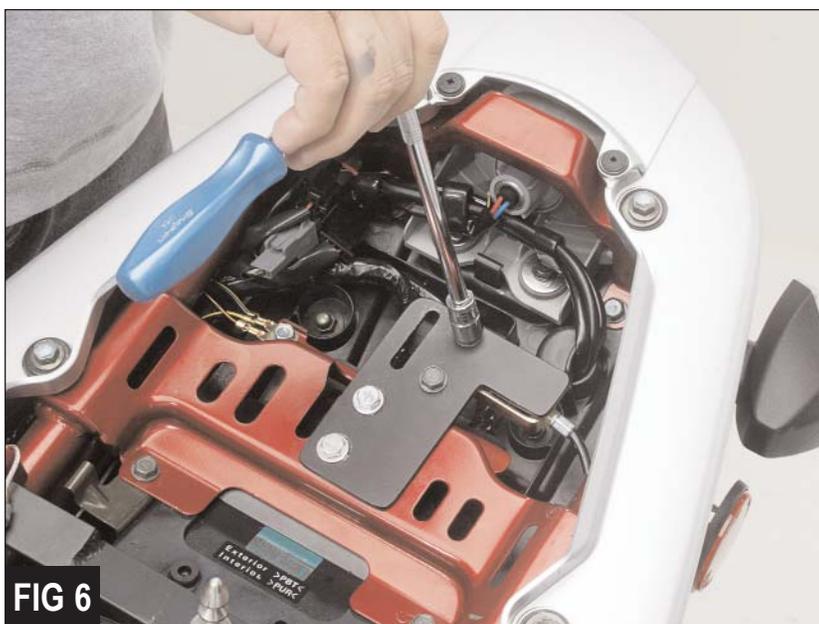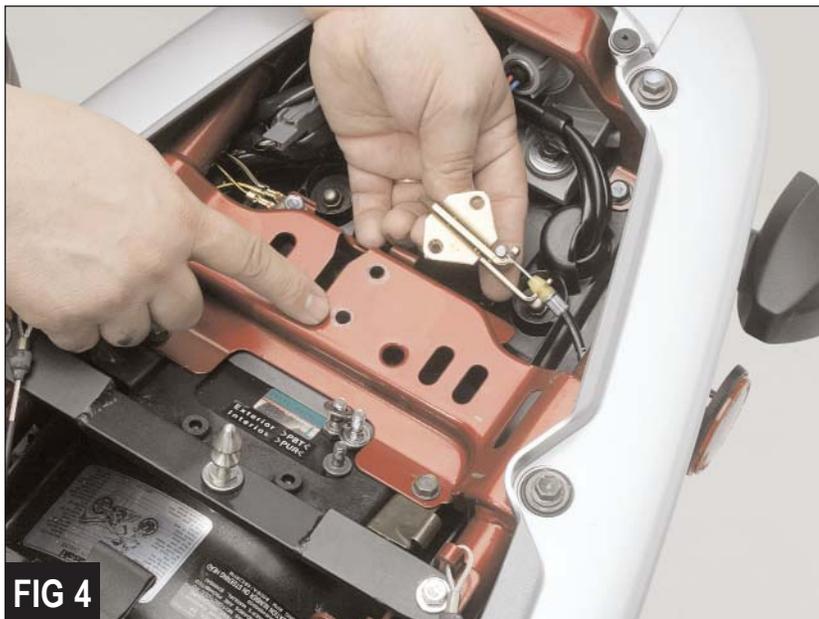

Questions? Give us a holler...
800-223-4332
tech@corbin.com