

**Part Number:** KLR-HPY-T

**Description:** Dual Sport Saddle

**Fitment:** KLR Happy Trails

**Revision:** 1



Tools Required	Parts List
10mm Socket Wrench Combination	

1. Remove the stock seat. To do this, you will need to remove the two 6mm hex head bolts on the left and right side covers (*Figure 1*). Pull gently on the bottom of the side cover to pop the plastic pin out of the rubber grommet on the chassis.




2. Next remove the 6mm hex head bolt on the left and right side of the seat (*Figure 2*), then lift the rear of the saddle up and rearward to remove it.



**NOTE:** There is an over fill rubber hose that will need to be moved to the inside location of the gas tank lip (*Figure 3*). Your Corbin saddle will then be able to slide into position just like stock.

**NOTE:** The rear bracket can be adjusted to get the best fit. To get the best adjustment, you can snug the bolts in just enough to hold the bracket in place, then lay the seat on the bike and adjust the brackets to the correct location. Next, remove the seat, being careful not to loosen the set locations and tighten them up to 8 ft. lbs.

3. Slide the Corbin saddle into position and secure using the stock 6mm hex head bolts.

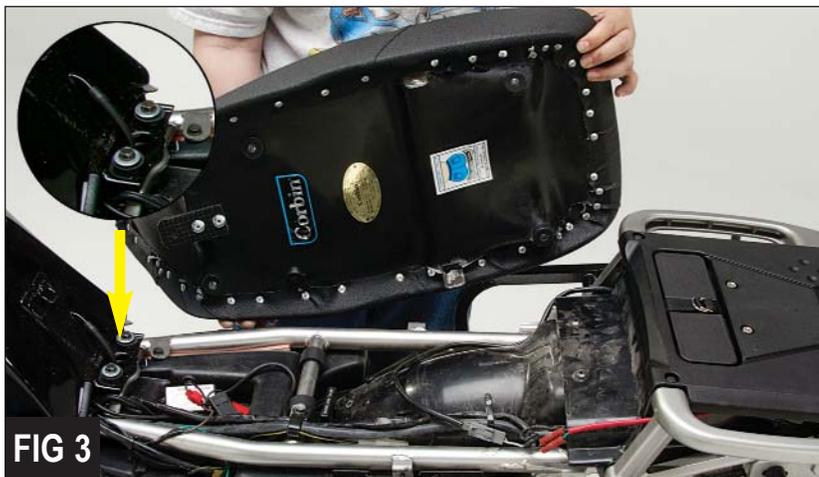

4. Re-install side covers. *Enjoy!*

Questions? Give us a holler...  
**800-223-4332**  
**tech@corbin.com**