

5. Continue side bracket installation as shown in Figure 5 by sandwiching the side bracket between your footpeg and chassis. Use two 8mm x 30 (1.5" long) bolts with flat washers on each side. Snug, but don't tighten yet.

6. From above install two 6mm x 20 (3/4" long) bolts with flat washers into the side brackets through the support bracket and holes previously used by your side reflectors. Do this for both sides of the bike. When all installation points are started, tighten everything securely. Reinstall your toolbox using supplied 6mm x 25 (3/4" long) bolts.

7. The final mounting points for the side brackets is located under the rear fender and will also resecure your license plate bracket. Use two 6mm x 25 (1" long) bolts with a flat washer and nylon spacer. Place them in this order: Flat washer, bracket tab, nylon spacer, fender and into license plate bracket.

8. Install a hex stud into the rear hole left from removal of your hand rails. Use a flat washer on both sides of the frame tab and secure the stud with a 3/8" nylock nut. Repeat on the other side.



9. On the left side, remove the C-clip and pin from the passenger footpeg. Secure the Corbin bracket using a 6mm x 50 (2" long) bolt. Place a flat washer on top and use a lock washer with nylock nut on the bottom. Refer to Figure 6.

10. On the right side, remove the acorn nut from your pipe hanger and install the Corbin bracket as shown in Figure 7 replacing the flat washer. If you are working on a 1200cc model and previously removed the exhaust canister, save this step for AFTER the right bag is installed.

11. Install the saddlebags onto the studs provided with the newly installed brackets. Secure with a flat washer, lock washer and chrome acorn nut. At the bottom of the bags, secure with a 14mm bolt, flat washer and lock washer. When all mounting positions are complete, tighten securely.

11B. For 1200cc models, reinstall the exhaust canister being careful not to scratch the saddlebag. Now install the lower bracket as outlined in step 10.

12. Adjust door latches if necessary and re-install your seat. That's it, you're done!

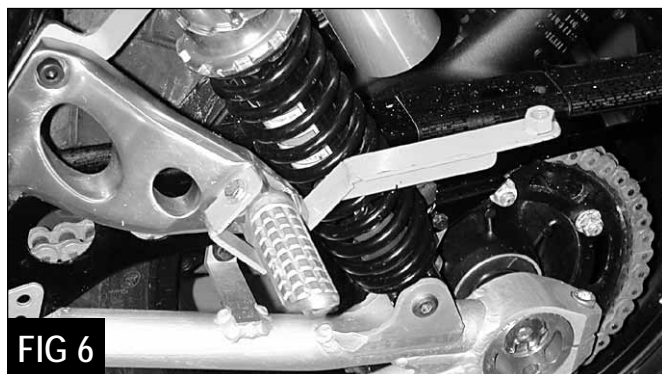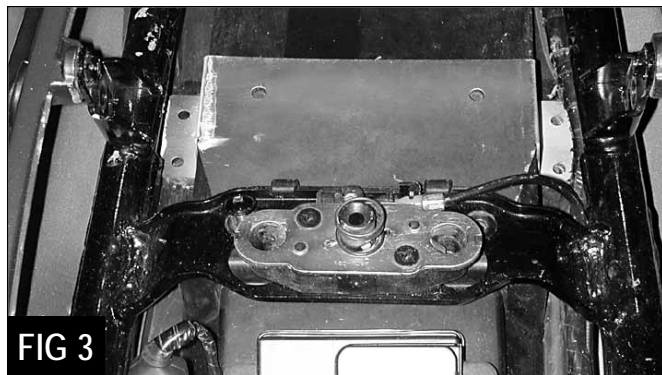

Questions? Give us a call!
800-223-4332
daytona@corbin.com