

Part Number: V-JPOT-6-BAG

Description: Fleetliner Saddlebags

Fitment: 2006-2007 Victory Vegas Jackpot

Revision: 1



Tools Required	Parts List
6mm Hex Key (allen head wrench) 5/32 Hex Key 3/32 Hex Key 5/8 Open Wrench 9/16 Open Wrench	1 #A00928 Left upper mounting bracket 1 #A00929 Right upper mounting bracket 1 #A00930 Lower bracket 6 m8 x m20 Chrome button head Allen screws 6 5/16" Chrome flat washers 2 1/4" x 20 x 3/4" Chrome button head Allen screws 2 1/4" x 20 Chrome flat washers 4 #P10709 Stainless steel studs 2 #P10070 Stainless steel studs 2 3/8" x 16 x 3/4" Hex head screws 2 5/16" Chrome flat washers 8 3/8" Chrome flat washers 8 3/8" Chrome lock washers 8 3/8" x 16 Chrome acorn nuts

NOTE: We recommend the use of Loctite® or other threadlock material when assembling parts on your motorcycle.

1. Remove stock fender strut bolts, using a 6mm hex key (discard bolts). Be sure to hang onto the fender strut so it doesn't fall and scratch your bike. (Figure 1)



2. Install Corbin upper bag mount bracket onto the fender strut, using the supplied 5/16" chrome flat washer and #P10709 stainless steel stud (Figure 2). Use Loctite® and tighten to 12 ft. lbs.



3. Repeat this procedure on other side.

4. If you will be using a Corbin trunk box, install the trunk rack to the Corbin upper bag mount brackets with three bolts on each side. Use the m8 x m20 chrome button head bolts with a 5/16" flat washer on each. (Figure 3) Use Loctite®.



5. Remove the two top screws on the license plate. (Figure 4)


6. Install the Corbin lower saddlebag bracket by attaching it to the license plate, using the supplied 1/4" x 20 x 3/4" chrome Allen bolts and 1/4" chrome flat washer. (Figure 5)

7. Secure the upper bag mount bracket to the lower bag mount bracket using the supplied #P10070 stainless steel studs and 5/16" flat washer (Figure 6). Use Loctite® and tighten to 12 ft. lbs.

8. Mount the saddlebags to the installed brackets. Secure the top two bolts and the rear lower bolt with the supplied 3/8" flat washer, 3/8" lock washer and 3/8" acorn nut (Figure 7). Secure the front lower bolt with a 3/8" x 16 x 3/4" hex head bolt, flat washer and lock washer. Tighten all bolts to 12 ft. lbs.

NOTE: If using a trunk box, remove the cap on the saddle bag by unscrewing two button head allen screws with a 3/32 Allen wrench. (Figure 8)

9. Assure all brackets and mounting hardware has been tightened and is secure. You're ready to ride!

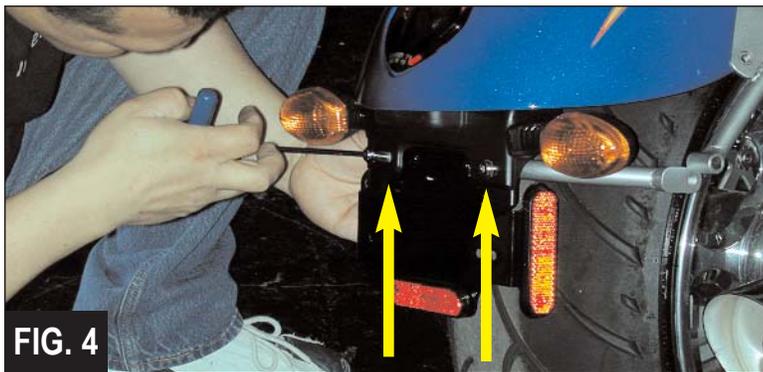

Questions? Give us a holler...
800-223-4332
tech@corbin.com