

Part Number: V-JPOT-6-SMUG

Description: Smuggler

Fitment: 2006 Victory Jackpot

Revision: 1


Corbin[®]

Tool Required	Parts List
6mm Hex Key (Allen wrench)	3 m8 x 30 (#SP00266) Allen bolts 3 5/16" flat washers 3 5/16" lock washers

NOTE: We highly recommend using a medium strength thread lock product, such as Loctite®, on all of the bolts when installing your Corbin saddle.

NOTE: With the Corbin smuggler installed, you will not be using the chrome fender plate.

1. Remove the stock rear seat. (Figure 1)
2. Remove the chrome plate mounted to the rear fender. You will do this by removing the two socket head bolts located towards the front.
3. Install the Corbin smuggler by aligning the three holes on the smuggler to the three holes on the rear fender. (Figure 2)
4. Secure with the provided m8 x 30 Allen bolts, 5/16" lock washer and 5/16" flat washers, using a 6mm Allen wrench. Tighten to 8 ft. lbs. Use Loctite on these bolts. (Figure 3)
5. Smuggler installation is now complete.

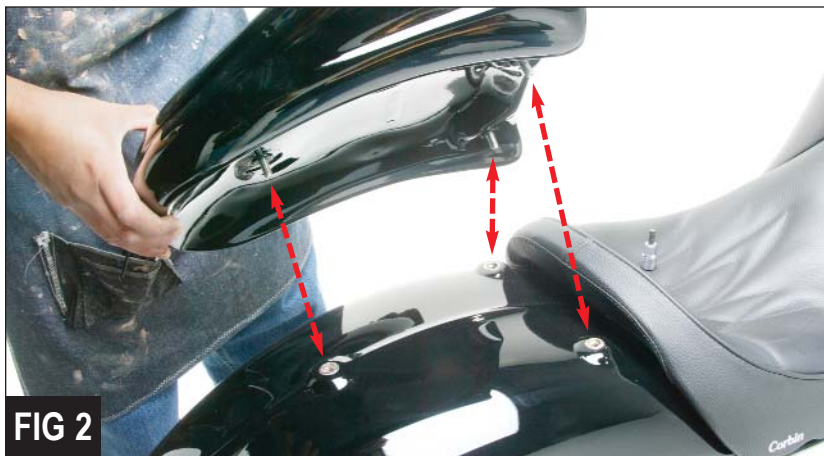

Questions? Give us a holler...
800-223-4332
tech@corbin.com