

**Part Number:** S-C109R-RACK & BOX-2H

**Description:** Luggage Rack & Fleetliner Trunkbox

**Fitment:** 2008-2009 Suzuki Boulevard C109 R


**Revision:** 1



Tools Required	Parts List
8mm Hex Key (allen head wrench) 5mm Hex Key 5/32" Hex Key 13mm Open Wrench	1 #A00829 Trunk support bracket 1 #A01060 Right support bracket 1 #A01061 left support bracket 4 m8 x 1.25 x m25 Chrome button head Allen bolts 6 1/4" x 20 Chrome button head Allen bolts 6 1/4" Chrome flat washers 4 5/16" Chrome flat washers 4 5/16" Lock washers 4 m8 x 1.25 Nylon Lock Nuts 2 #P11021 Aluminum spacers 2 #P11022 Aluminum spacers

**NOTE:** We recommend the use of Loctite® or other threadlock material when assembling parts on your motorcycle.

1. Remove stock fender strut bolts, using a 8mm hex key. Be sure to hang onto the fender strut so it doesn't fall and scratch your bike. (Figure 1)

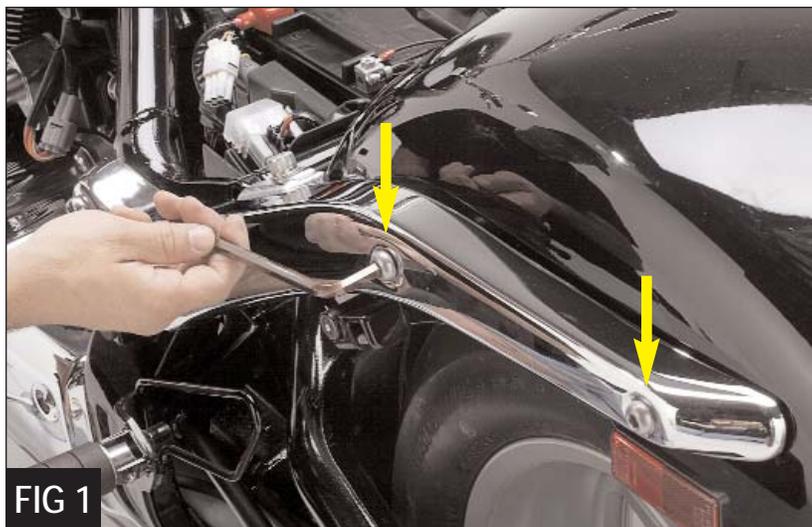

2. Install Corbin's right support bracket (#A01060) onto the fender strut, using the supplied spacers between the fender strut and the bracket, then secure with the stock bolts (Figure 2). Use Loctite® and tighten to 18-20 ft. lbs.




**NOTE:** Use spacer #P11021 (large) in the rear position and spacer #P11022 (small) in the front position or you can use the spacers that came with your sissy bar assembly.

3. Repeat this procedure on other side.

4. Now install the trunk support bracket. Place the left and right support brackets on the inside of the trunk bracket, line up the holes, then put one washer on a 8mm x 25mm chrome button head Allen screws (Figure 3), and secure with a flat washer, lock washer and nylock nut (Figure 4). Tighten to 10 ft. lbs. and remember to use Loctite®.

5. Line up the six holes on the trunk to the holes on the mounting bracket. Secure with the supplied 1/4 x 20 x 1" button head Allen bolts and flat washer (Figure 5). Tighten to 6 ft. lbs.

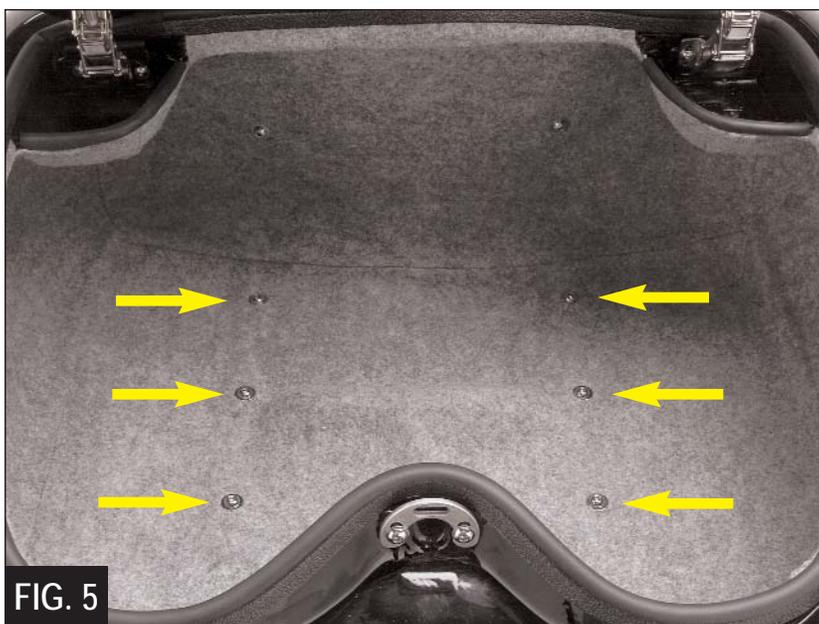

Questions? Give us a holler...  
**800-223-4332**  
tech@corbin.com