

Part Number: SV-65-F-3, SV-65-R-3
SV-65-SMUG-3 with PAD



Description: Front Saddle, Pillion Pad & Smuggler

Fitment: 2003, 2004-2006 Suzuki SV 650, SV 650 S & SV 1000 S

Revision: 1

Tools	Parts List
5mm Allen wrench for stock bolt 3mm Allen wrench for smuggler	1 SV-65-F-3 1 SV-65-R-3 1 SV-65-SMUG-3 with PAD 1 3mm Allen Key

1. Remove your stock seat. Refer to your owner's manual if necessary.

2. Front saddle mounts just like stock, using your stock bolts. Simply slip the two rear pegs into the rear chassis, align the front brackets and secure by using your stock bolts. (Figure 1)

3. To install the pillion, remove the bracket from your stock seat and install onto Corbin rear seat. Slide the rear bracket into the tail section, align the front bracket over the stock key lock system and push down. (Figure 1)

4. To remove the pillion seat, just turn the stock key on the side of the bike to release the lock and lift seat up.

5. To install the smuggler, start by making sure that the rear tab is loose. If the rear tab isn't loose, the smuggler will hit the handrail. Then slide the rear bracket into the tail section, align the front bracket over the stock key lock system and push down.

6. Next, tighten the two Allen screws inside the smuggler, using the provided 3mm Allen wrench. Tighten to 6 ft. lbs.

7. To remove the smuggler, loosen the two Allen bolts, turn the stock key on the side of the bike to release the lock.

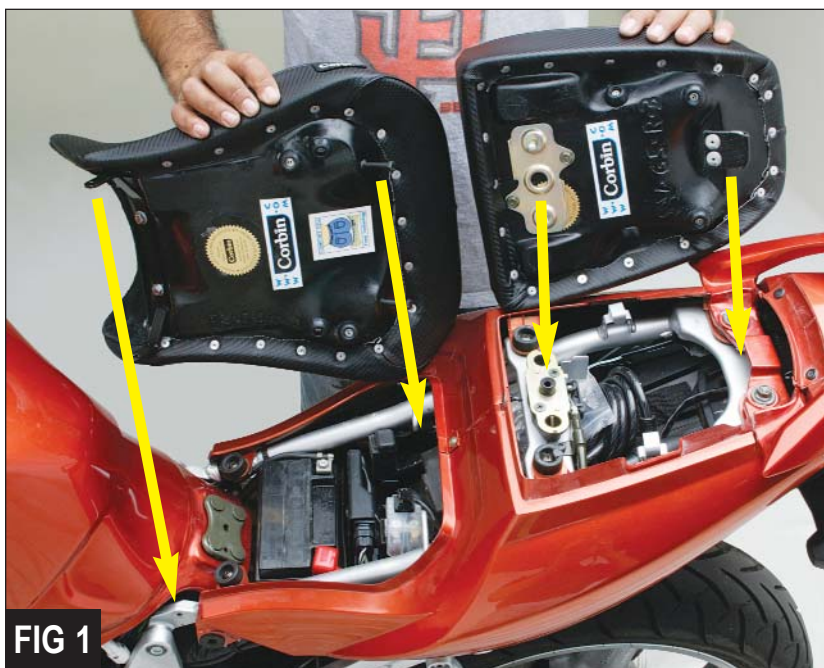


FIG 1



FIG 2

Questions? Give us a holler...
800-223-4332
tech@corbin.com