

**Part Number:** ROAD-YLNR-FAIR

**Description:** Touring Fairing

**Fitment:** 1999-2006 Yamaha Road Star

**Revision:** 1



Tools Required	Parts List
17mm Socket or combination wrench 10mm Socket or combination wrench 4mm Allen wrench 5mm Allen wrench	4 m8 x 1.25 x 40 Chrome button head bolts 2 m6 x 1.0 x 40 Chrome button head bolts 4 5/16" flat washers 2 1/4" flat washers 2 3/8" flat washers 2 10mm hex head bolt 2 #P10469 aluminum spacers 1 #A00921 Chrome fairing bracket (left) 1 #A00920 Chrome fairing bracket (right)

**NOTE:** We recommend the use of Loctite® or other threadlock material when assembling parts on your motorcycle.

1. Assure that you have all of the parts necessary for installation. The two Corbin fairing mount brackets are NOT the same but are a near mirror image of each other.



2. Fairing installation is simple and requires only that our brackets be installed onto your front end with two included bolts and flat washers per side.

3. To install, remove the two stock bolts on the triple tree clamp. (Figure 1)

4. Remove the two hex head bolts that hold the headlight bucket to the lower triple clamp. (Figure 2)

5. Now secure the Corbin bracket with a spacer between the Corbin bracket and your bike in the top position with one of the 10mm hex head bolts and 3/8" flat washer (Figure 3) and a 8mm x 1.0 x 40" chrome button head Allen bolt with a 1/4" flat washer at the bottom position (Figure 4).

Use Loctite® on these bolts and tighten to 12 ft. lbs.

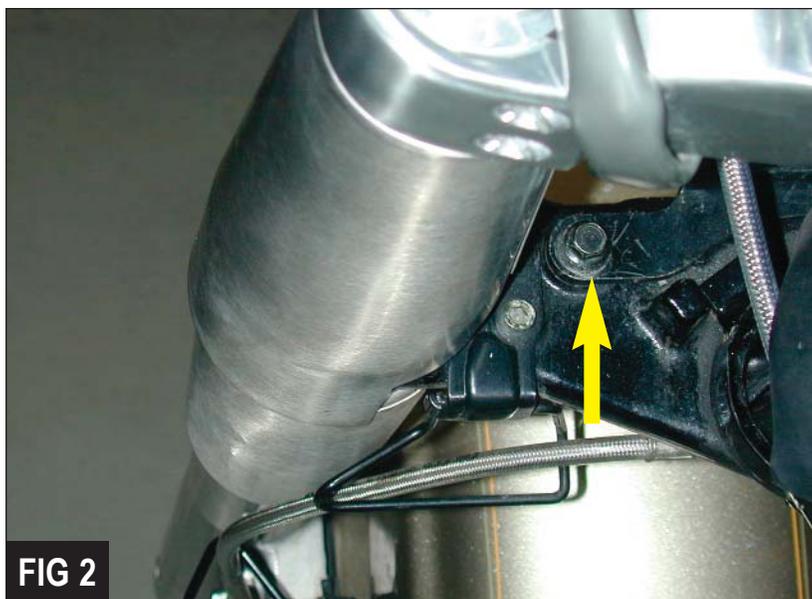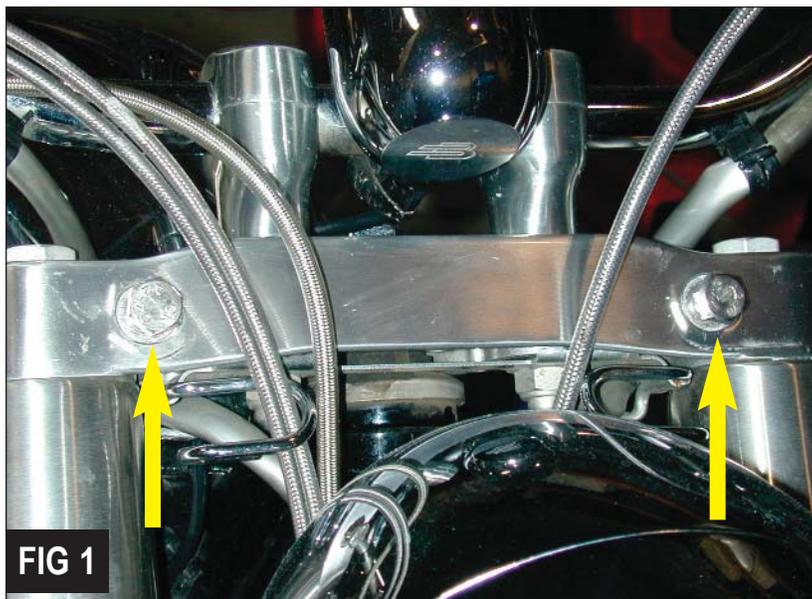

6. Repeat this procedure on the other side.

7. You are now ready to place the fairing and attach it to the brackets. You can most likely position the fairing and have it sit by itself while you bolt it on, but we think it's a good idea to have a friend help. Just to guard from scratching the new paint.

8. Secure the fairing to the bracket with a chrome m8 x 1.25 x 40 button head Allen bolt and flat washer at each of the four locations (Figure 5).

Use Loctite® on these bolts and tighten to 10 ft. lbs.

9. Assure that everything looks sano with no pinched wires or crimped hoses and you're ready to go show 'er off. Enjoy the ride!

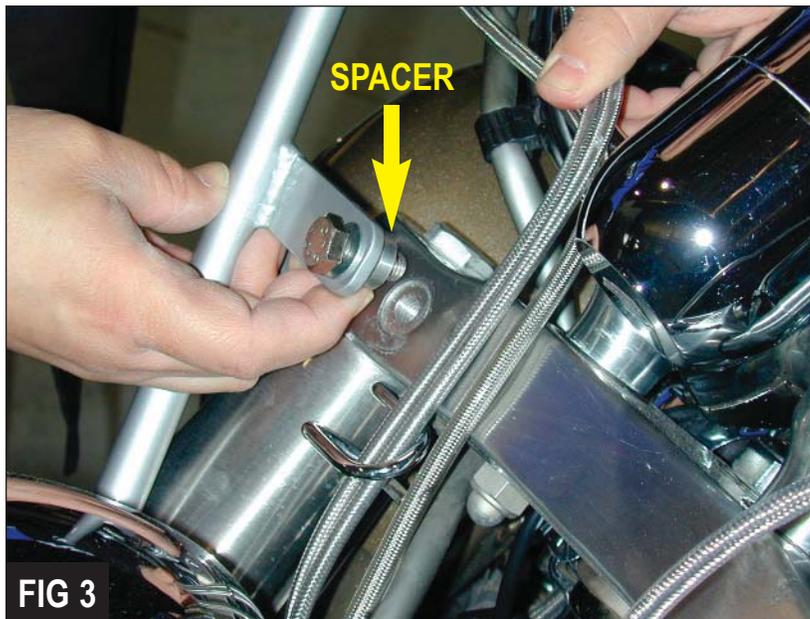


FIG 3

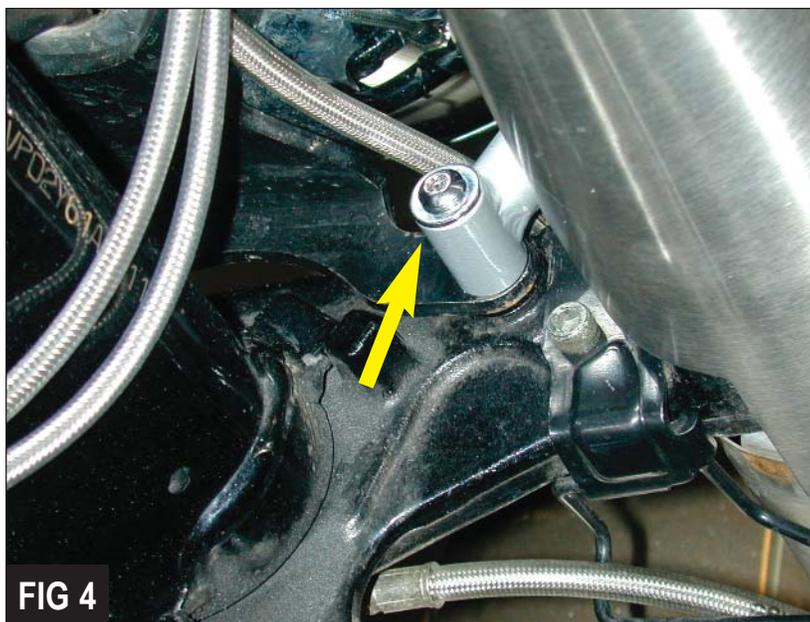


FIG 4

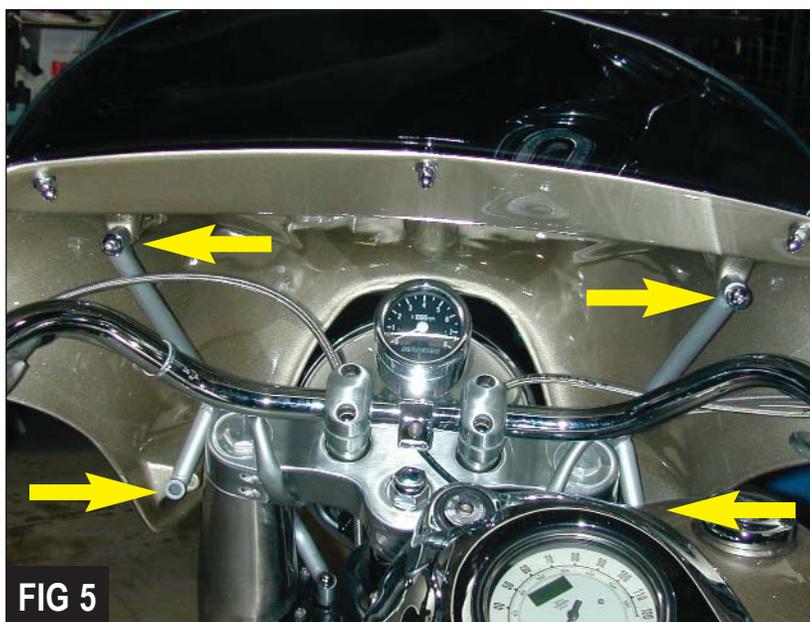


FIG 5

Questions? Give us a holler...  
**800-223-4332**  
**tech@corbin.com**