

Part Number: Y-MT01-F, Y-MT01-R &
Y-MT01-SMUG



Description: Front, Rear & Smuggler Saddle

Fitment: Yamaha MT-01


Revision: 1

Tools Required	Parts List
4mm Allen wrench 10 mm socket / combination wrench	1 #A00868 Corbin lock pin bracket 2 6mm x 35mm hex head bolts 2 3/16" flat washers




NOTE: We recommend the use of Loctite® or other threadlock compound when assembling parts on your motorcycle.

1. Remove stock seat.
2. **Front Saddle:** The front saddle secures to the bike with a tongue in the front and stock latch mechanism in the rear. Simply slide the saddle into place nose-first then lower onto the stock mounting bracket and push down (*Figure 1*). To remove, use your stock key.

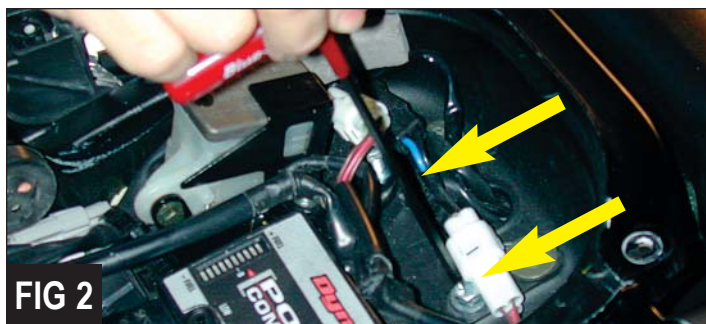

3. **Rear & Smuggler Saddle:** Remove the stock Allen bolts on the rear chassis (*Figure 2*).

4. Install the Corbin bracket (#A00868) on your motorcycle, making sure the locking pin is pointed up and the spacer is on the left side (*Figure 3*). Use the included 6mm x 35 hex head bolts with a 3/16" flat washer on each (*Figure 4*). Tighten to 12 ft. lbs. Don't forget the loctite!

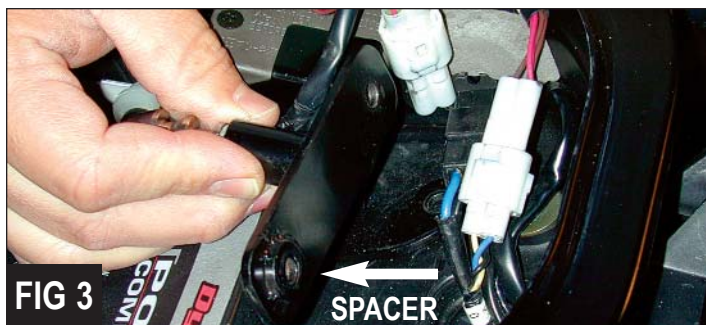

5. The rear & smuggler saddles installs with a tongue in the front and Corbin latch pin in the rear. Slip the front tongue under the front mounting bracket, align with rear lock pin you just installed and push down until you hear two clicks. To remove, use the supplied key.

NOTE: When installing the smuggler saddle, open the lid to the smuggler, then push down on the base to lock in place.

Questions? Give us a holler...
800-223-4332
tech@corbin.com

