

Part Number: Y-R-8-STFAIR
Description: Fleetliner Fairing
Fitment: 2008 Yamaha Raider
Revision: 1



Tools Required	Parts List
5 mm Allen wrench 6 mm Allen wrench Small Flat Screwdriver	1 #A00978 Right mounting bracket 1 #A00979 Left mounting bracket 8 m8 x 1.25 x 40 Chrome button head bolts 8 5/16" Chrome flat washers

NOTE: We recommend the use of Loctite® or other threadlock material when assembling parts on your motorcycle.

1. Assure that you have all of the parts necessary for installation. The two Corbin fairing mount brackets are NOT the same but are a near mirror image of each other.

2. Fairing installation is simple and requires only that our brackets be installed onto your front end with two included bolts and flat washers per side.


3. To install, remove the chrome covers on the top and lower triple clamps, using a small flat screwdriver. Then remove the stock bolts with a 6mm Allen wrench (*Figure 1*).

4. Now secure the Corbin brackets with the supplied m8 x 1.25 x 40 chrome button head screws and a flat washer at the top and lower positions (*Figure 2*), using a 5mm Allen wrench. Use Loctite® on these bolts and tighten to 12 ft. lbs.

5. You are now ready to place the fairing and attach it to the brackets. You can most likely position the fairing and have it sit by itself while you bolt it on, but we think it's a good idea to have a friend help. Just to guard from scratching the new paint.

6. Secure the fairing to the brackets with the supplied m8 x 1.25 x 40 chrome button head bolts and flat washers at each of the four locations (*Figure 3*). Use Loctite® on these bolts and tighten to 10 ft. lbs.

7. Assure that everything looks sano with no pinched wires or crimped hoses and you're ready to go show 'er off. Enjoy the ride!

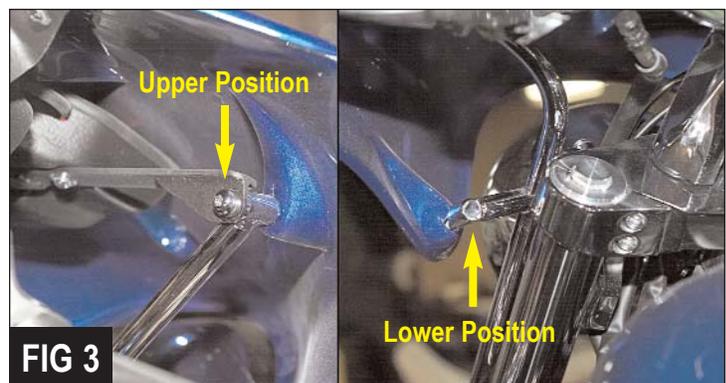

Questions? Give us a holler...
800-223-4332
tech@corbin.com