

Part Number: Y-VS13-7-CHIN

Description: Chin Spoiler

Fitment: 2007 Yamaha V-Star 1300

Revision: 1



Tools Required	Parts List
14mm socket wrench 10mm open wrench 5mm hex key (Allen wrench)	1 #A00885 Center front mounting bracket 1 #A00884 Lower left mounting bracket 1 #A00883 Lower right mounting bracket 2 m8 x 1.25 x 25 Flat head socket cap screws 1 m8 x 1.25 x 20 Button head Allen screw 1 5/16 Flat washer 1 5/16 Lock washer 2 Plastic spacers 2 m6 Nylock nuts 2 m6 flat washers

NOTE: We recommend using Loctite® or similar threadlock material when assembling parts on your motorcycle.

1. Install the upper mounting bracket (#A00885) onto the chassis with the supplied nylon plastic spacer between the bracket and the chassis. Secure with the supplied 10mm hex head bolt and flat washer (*Figures 1 & 2*).

2. Remove the first bolt on the floor board mounting bracket on the left and right side.

3. Install Corbin's left and right mounting brackets using the stock bolt (*Figure 3*). Snug the bolt, but do not tighten yet. Use Loctite®.

5. Next, flip the horn around so the chin spoiler doesn't block the horn (*Figure 4*).

6. To allow room for the chin spoiler to slide into place and to decrease the chances of scratching, you may want to jack up your bike or remove the front fender.



FIG 1




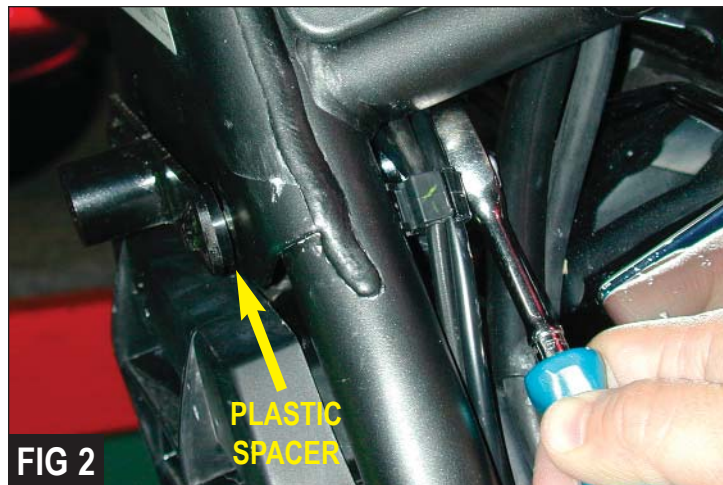


FIG 2

7. Slide the chin spoiler in place, line up the top mounting position and secure with the supplied m8 x 1.25 x 20 chrome button head Allen bolt, 5/16 flat washer and lock washer (Figure 5).

8. Secure the bottom brackets with the supplied m8 x 1.25 x 25 flat head socket cap screws (Figure 6).

Use a drop of Loctite® and tighten all the bolts.

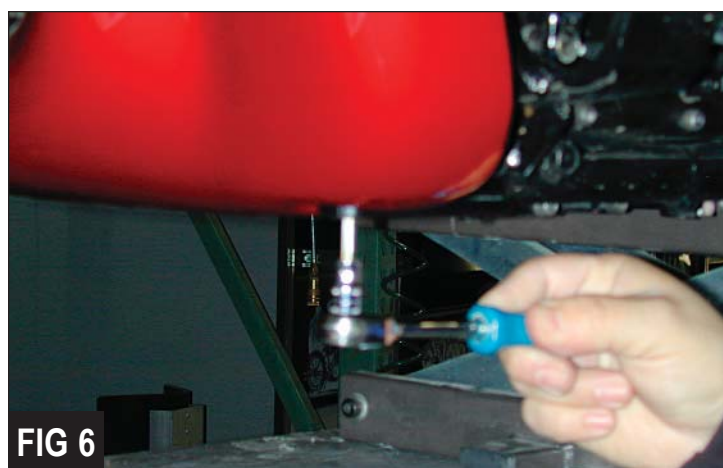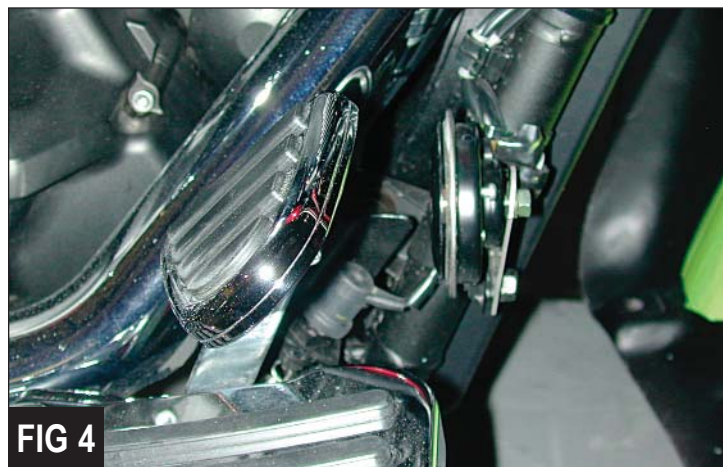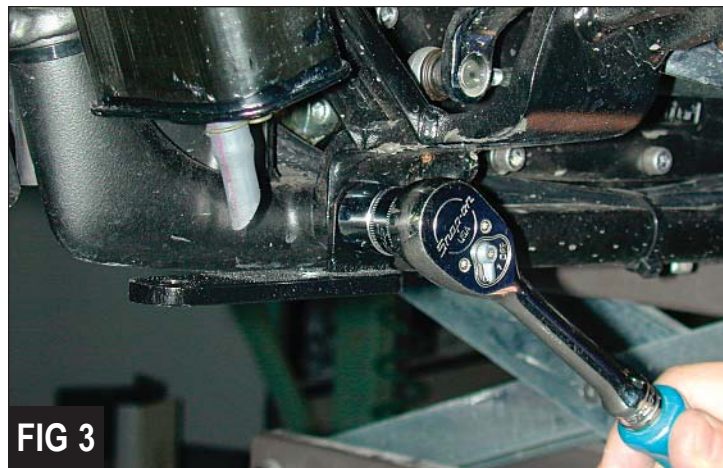

Questions? Give us a holler...
800-223-4332
tech@corbin.com