

Part Number: BMW-GS13-A-F(E) & BMW-GS13-A-R(E)

Description: Front and Rear Saddles

Fitment: 2025 BMW R1300 GS Adventure

Revision: 1



Tools Required	Parts List
3/32 Allen Wrench	1 SP02677 2-Wire Front Connector - Pre-installed 1 SP02681 4-Wire Rear Connector - Pre-installed 2 SP00201 8/32 x 1/2 Allen Bolts


1. Remove the stock seat(s) from your bike and disconnect the wiring harness on the front and rear saddles (*Figures 1 & 2*). Refer to your owners manual if necessary.

2. Remove the bracket with bar holder on the stock rear seat (*Figure 3*) and transfer it onto the Corbin rear seat. Secure with the supplied 8/32 x 1/2 Allen bolts, using a 3/32 Allen wrench. (*Figure 4*).

3. Corbin's front and rear saddles mounts just like stock. Slide the front tab of your front saddle under the front seat mount at the rear of the gas tank, then lower the rear of the front seat down onto the chassis. For the rear saddle, slide the two front tongues under the front saddle, align the rear of the saddle to the locking mechanism and push down. To remove, use the stock key to unlock and pull up.


4. **Electric Heat Installation:** Connect the front BMW connectors to the pigtail (SP02677 2-Wire) on the Corbin front saddle (*Figure 5*) and then connect the rear BMW connectors to the pigtail (SP02677 4-Wire) on the Corbin rear saddle (*Figure 6*).

NOTE: The heater operates on the dash controls.

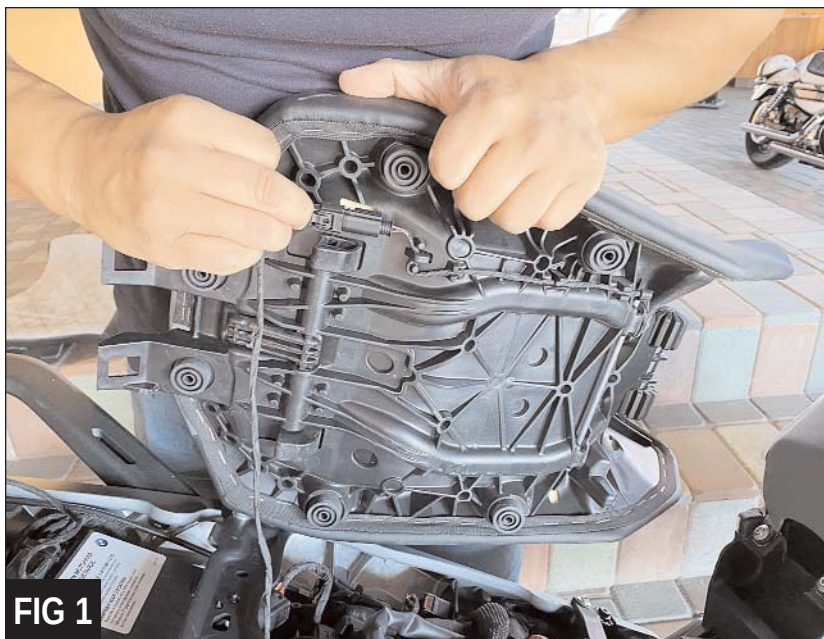

5. Proceed with saddle mounting as outlined above.

Enjoy your new saddle!

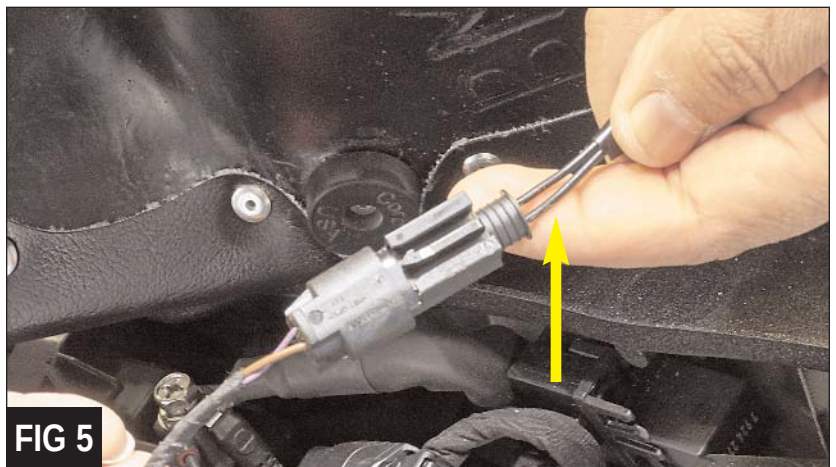

Questions? Give us a holler...
800-223-4332
tech@corbin.com