

Part Number: BMW-VA-PAD

Description: Passenger Rest for BMW Vario Top Case

Fitment: BMW Vario Top Case

Revision: 2



Parts List

- 5 6m x 20 x 1" Button Head Allen Bolts
- 5 #SP01080 6mm Flat Washers

Tools Required

- 4mm Allen Wrench
- Phillips Screwdriver

NOTE: If the top / front of your trunk lid has the plastic trim, follow steps 1 thru 3.

1. Open the trunk and remove three short 20-T wood screws from the front edge of the lid (*Figure 1*), then remove the plastic trim from the trunk.
2. Turn the plastic trim over and place on a soft surface. Drill 2-5/16" holes where marked on the trim, then install the Corbin top pad and secure with the supplied m6 Allen bolts and flat washers (*Figure 2*).
3. Reinstall the plastic trim with Corbin top pad. Be careful to not over tighten and strip the plastic.

NOTE: Follow steps 4 thru 8 if your trunk lid DOES NOT have the plastic trim.

4. Open the trunk and remove three short 20-T wood screws from the front edge of the lid (*Figure 3*).
5. Remove three long Phillips wood screws from the rear of the trunk (*Figure 4*), then pull down the lock/latch mechanism (*Figure 5*).
6. Remove two m6 Phillips bolts from under the rear of the trunk lid (*Figure 6*).
7. Remove the top of the trunk lid and drill 2-5/16" holes where marked on the lid (*Figure 7*), then install the Corbin top pad and secure with the supplied m6 Allen bolts and flat washers.



FIG 1



FIG 2

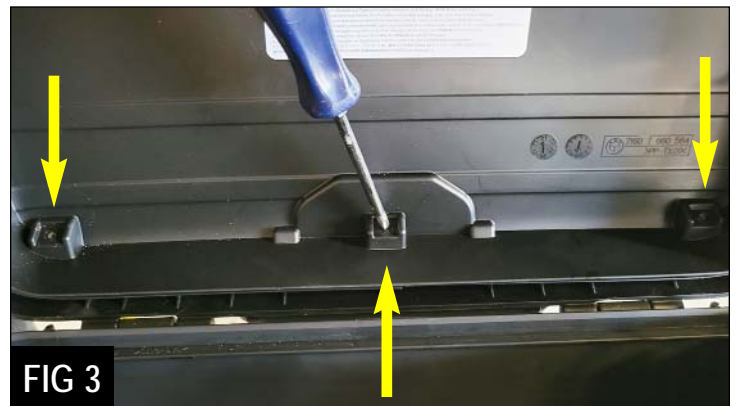


FIG 3



FIG 4

8. Reinstall the top portion of the trunk lid with Corbin top pad, lock/latch mechanism and the inner part of the trunk lid. Be careful to not over tighten and strip the plastic.

9. Cut the provided drill template out along the outside dotted line.




10. Double check the drill template is printed correctly by measuring center to center on the top two holes. The measurement should be 8 inches.

11. Set trunk to lower position and place the template on the trunk as shown in *Figure 8*.

- a. Bottom tab of template centered between trunk mounting flanges
- b. Bottom edge of template aligns with mold line in trunk


12. Mark and drill 3-5/16" holes.

13. Install the Corbin bottom pad and secure with the supplied Allen bolts and flat washers (*Figure 9*).

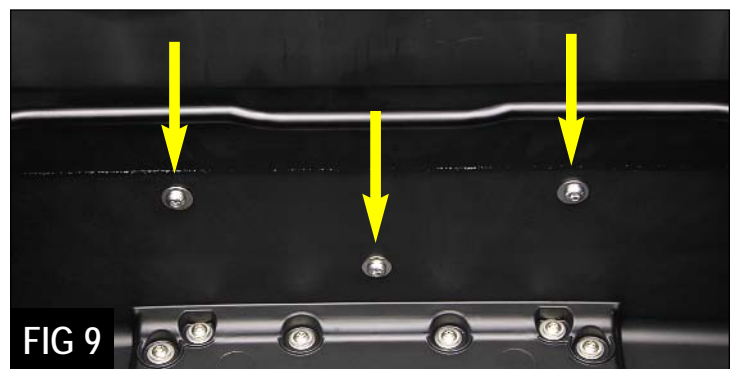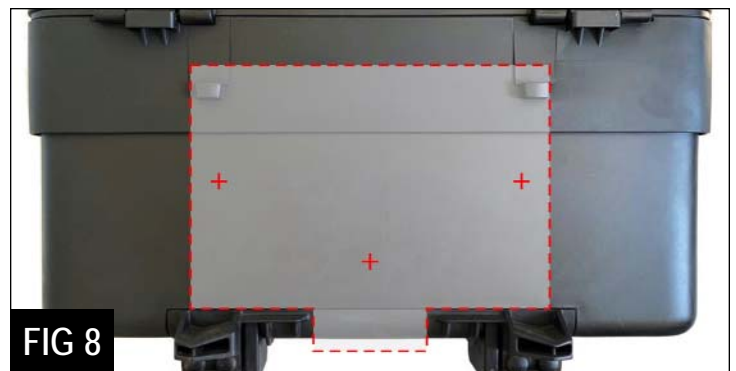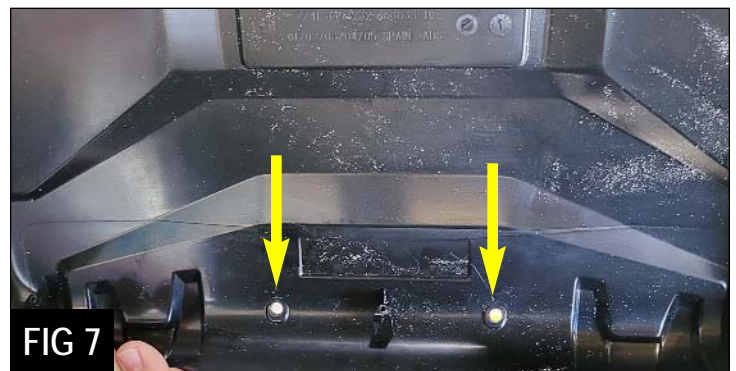

Questions? Give us a holler...
800-223-4332
tech@corbin.com

BEFORE DRILLING: Please verify scale of print by confirming printed dimensions are 1:1

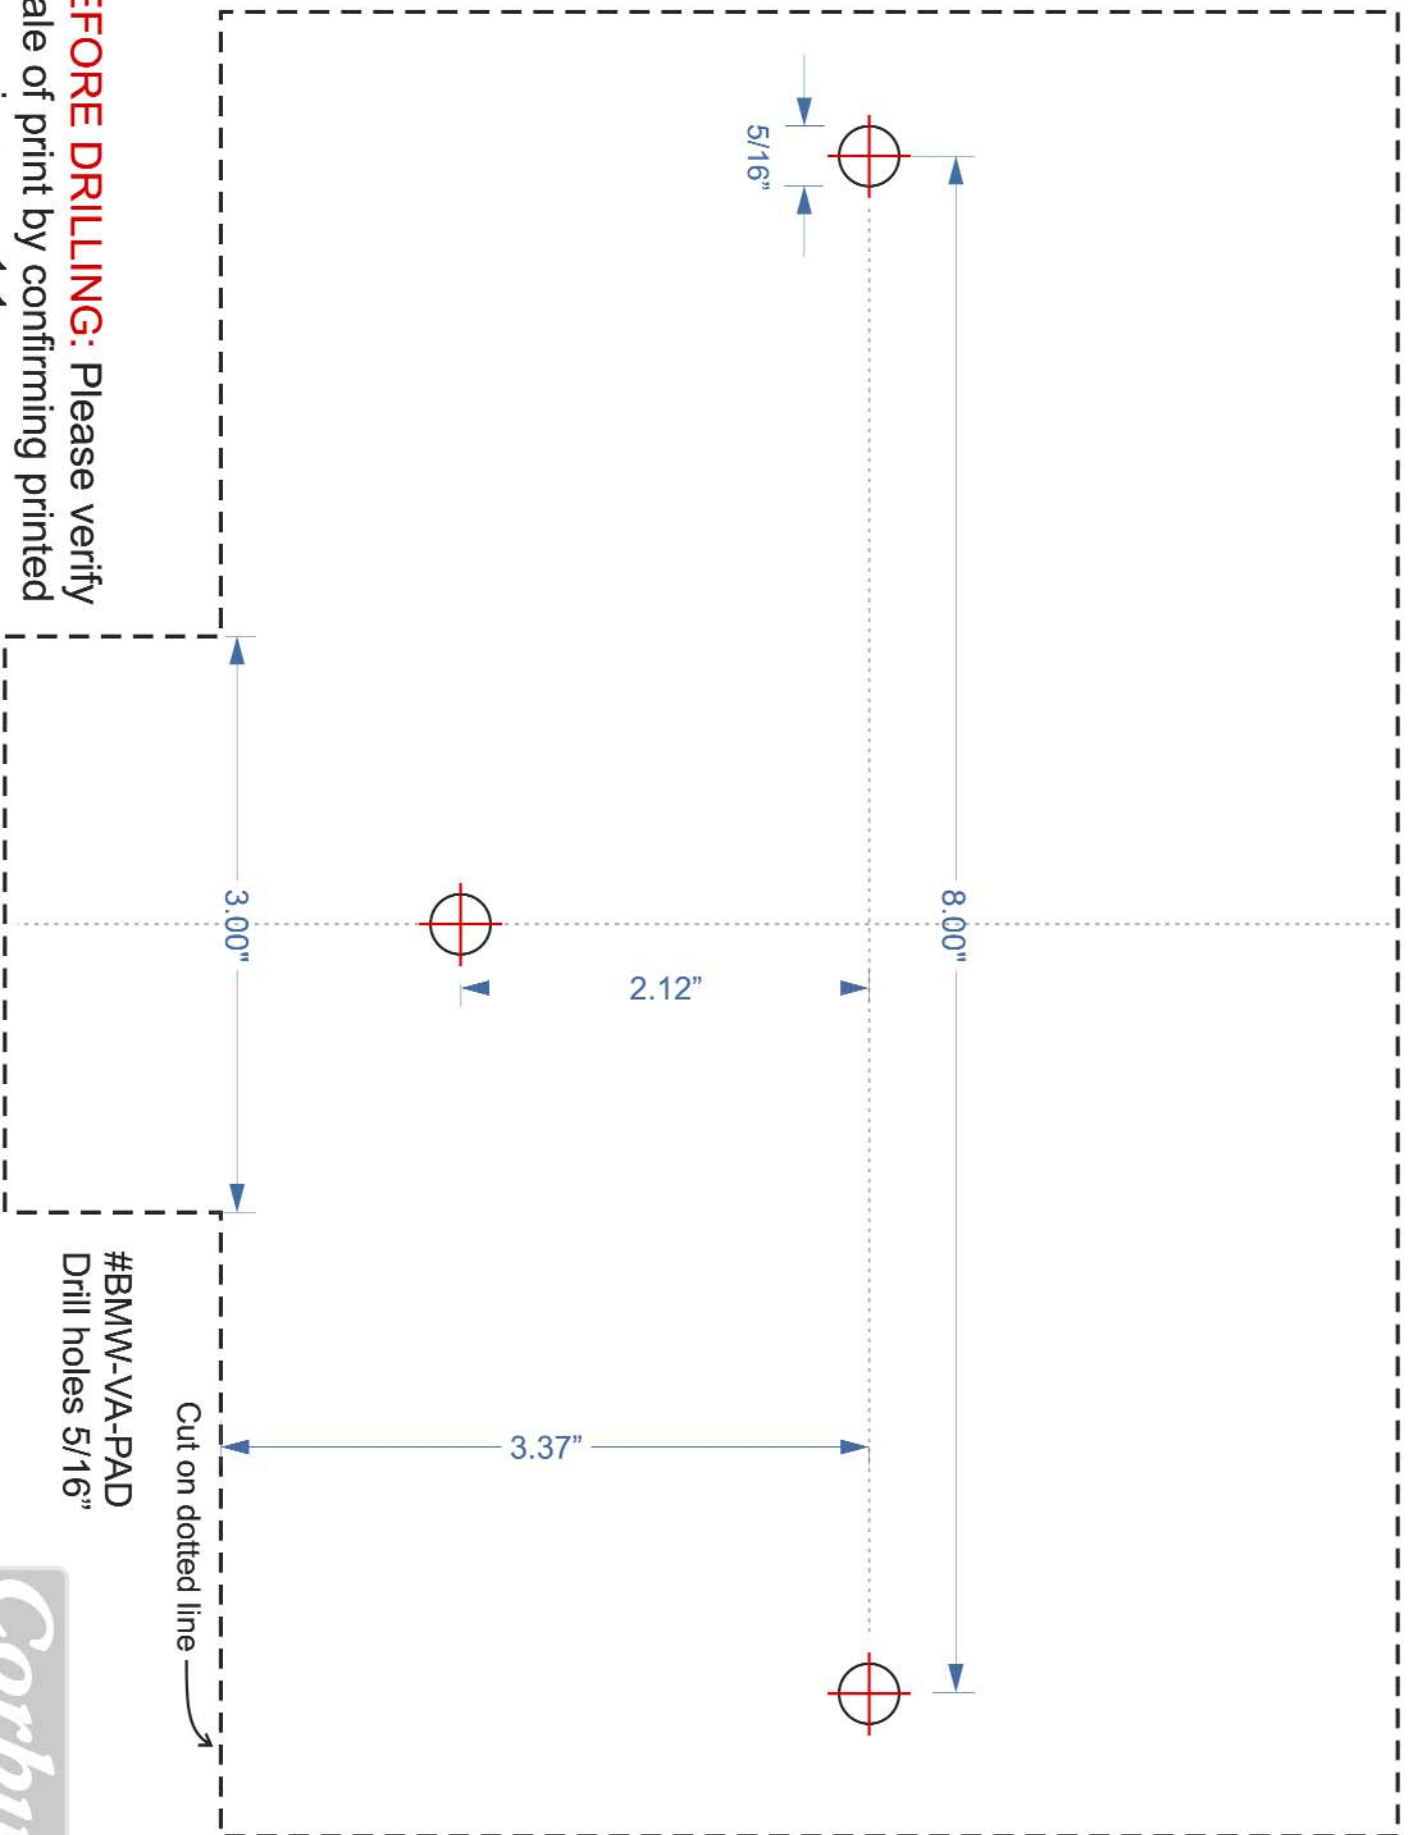

#BMW-VA-PAD
Drill holes 5/16"

Cut on dotted line



Diagram for Trunk Lid without Plastic Trim
(Steps 4 thru 8)

