

**Part Number:** D-PAN-F & D-PAN-R

**Description:** Front & Rear Saddle

**Fitment:** 2014 Ducati 899 Panigale

**Revision:** 1

**Corbin**

| Tools Required                      | Parts List |
|-------------------------------------|------------|
| 3mm Allen key<br>10mm Socket wrench |            |

1. Begin by removing the front and rear stock seat (refer to owner's manual).

1. Remove the 5 bolts on the body panel, using a 3mm Allen key. (Figure 1)

2. Lift the side panels and pull out the front body panel. (Figures 2 & 3)

3. Using a 10mm socket wrench, remove the two nuts on the holding strap. (Figure 4) Remove the strap and put the nuts back in place.

4. Re-install the front body panel and secure with stock bolts.

5. Rear saddle installs like stock with brackets preinstalled on the saddle to integrate with stock keylock. Just snap in place. (Figure 5)

6. Front saddle also installs like stock with two tabs in the rear and an aluminum tab in the front. Slide the rear of the front saddle into place and secure the front with your stock bolt. (Figures 6 & 7)

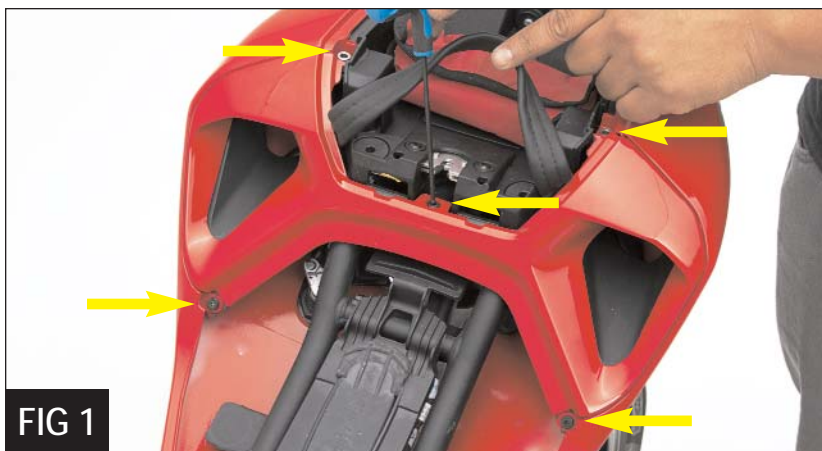




FIG 4



FIG 5



FIG 6



FIG 7

Questions? Give us a holler...  
**800-223-4332**  
tech@corbin.com