

Part Number: D-HM11-7

Description: Canyon Dual Sport


Fitment: 2007 Ducati Hyper Motard

Revision: 1



Tools Required	Parts List
3mm Allen Key 4mm Allen Key 8mm Socket Wrench Combo	1 # A00982 Lock Bracket 3 5mm Chrome Button Head Allen Bolts 3 6mm Chrome Flat Washers 2 Plastic Spacers

1. Remove your stock seat. Refer to your owner's manual if necessary.
2. Start by removing the two front bolts on the plastic tail cover (*Figure 1a*), using a 4mm Allen wrench and open wrench (*Figure 1b*).
3. Install the Corbin locking system bracket by positioning it between the plastic tail cover and the frame. Then put the supplied plastic spacers between the locking system bracket and the plastic tail cover. Secure with the supplied 5mm chromed button head Allen bolts and flat washers (*Figure 2*). Use Loctite® and tighten to 6 ft. lbs.
4. Now you are ready to install your Corbin saddle. Simply slide the saddle onto the bike nose first, lower the seat into position and align the latch mechanism to the locking system you just installed and push down until you hear one click. (*Figure 3*)
5. To remove, use the supplied key on the right side of the locking system bracket you just installed, to release the lock.

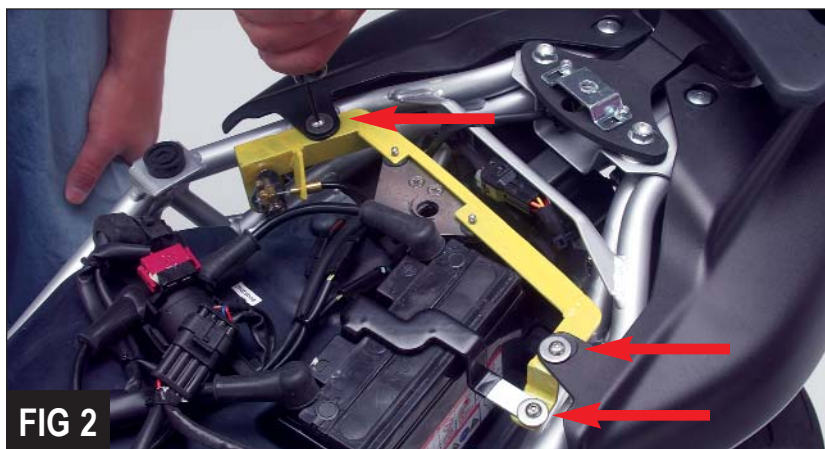

Questions? Give us a holler...
800-223-4332
tech@corbin.com