

Part Number: E-EXGT-CDS(E)

Description: Canyon Dual Sport Saddle

Fitment: Energica Experia GT

Revision: 2



Tools Required	Parts List
3mm Allen Wrench 4mm Allen Wrench	1 #A01331 Corbin Bracket 2 #SP02567 m5 x m30 Button Head Allen Bolts 2 #SP01080 Flat Washers

1. Pop off the side panels and remove the stock seat. See owners manual if necessary.

2. The Corbin saddle mounts easily with brackets preinstalled, that secure to the included bracket that mounts to your chassis.

3. Remove the two stock bolts on the chassis. Then mount the Corbin bracket to the chassis where you just removed the stock bolts and secure with the provided m5 x m30 button head Allen bolts and flat washers, using a 3mm Allen wrench. (Figure 1)



FIG 1

4. Install the Corbin saddle by sliding the rear in place and lowering the seat into position, then secure the side brackets with the stock bolts (Figure 2).

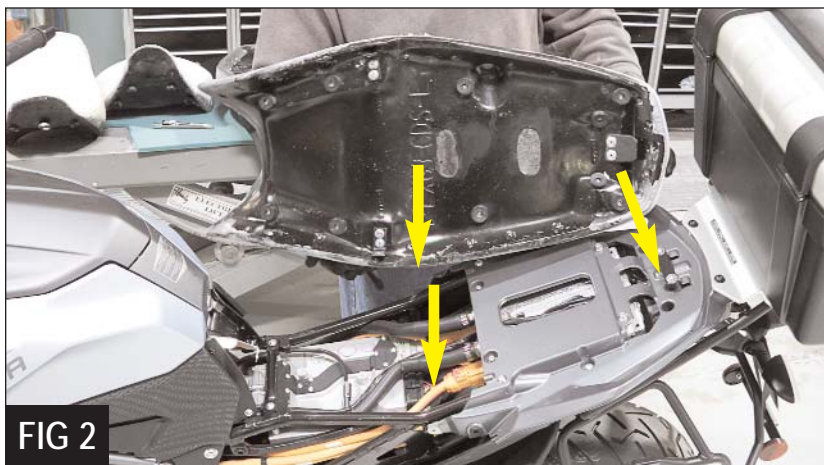


FIG 2

NOTE: When installing/removing the Corbin saddle, you will need to flex in the black plastic panels near the tank to clear the sides of the seat (Figure 3).

5. Reinstall the side panels.

6. If you ordered the heated model, we include a pigtail extension that plugs into the 12v accessory plug on your bike (the thinner gauge of the two jacks on the front right of the bike) Figure 4. Route the pigtail on the seat behind the frame and plug into the 12v accessory plug on the bike. Then route and secure the wires neatly out of the way.



FIG 3

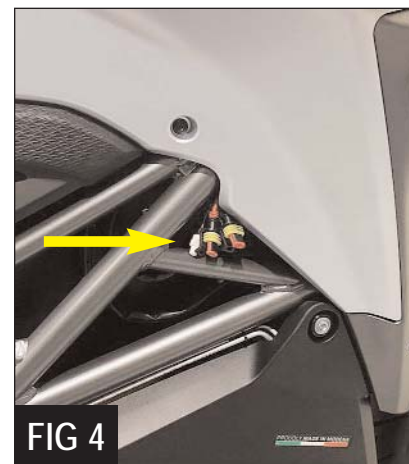


FIG 4

Enjoy!

Questions? Give us a holler...

800-223-4332
tech@corbin.com