

Part Number: E-RIB-20

Description: Gunfighter Saddle

Fitment: 2020-2023 Energica Eva Ribelle

Revision: 1





Tools Required	Parts List
2.5mm Allen Wrench 3mm Allen Wrench	

1. Turn the key on the bike to lift the stock seat.
2. Remove the two plastic keepers using a 2.5mm Allen wrench (*Figure 1*). Then disconnect the prop rod, by squeezing it together (*Figure 1*).
3. Remove the bolt and clip on the rear hinge, using a 2.5mm Allen wrench (*Figure 2*).
4. Remove the rear hinge on the stock seat, using a 2.5mm Allen wrench (*Figure 3*) and transfer it to the Corbin seat by removing one of the brackets on the seat, slide the stock hinge in place, keep the brackets aligned and secure using a 3mm Allen wrench.

NOTE: In the next step, it would be helpful to have a second pair of hands to hold the seat while installing the clip and bolt onto the hinge.

5. Install the Corbin seat just like stock. Place the rear hinge on the seat into the rear clip on the bike. Tighten the bottom bolt on the clip. Reconnect the prop rod (*Figure 4*).

Enjoy!

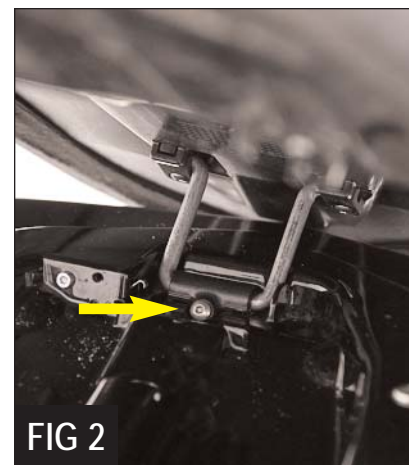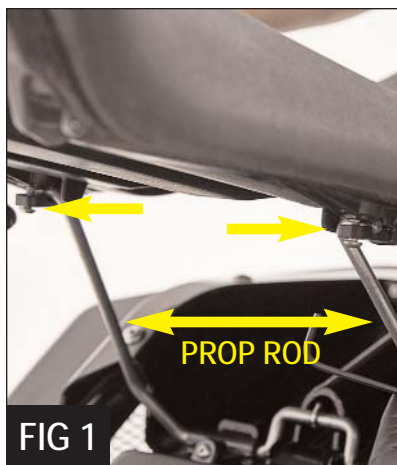

Questions? Give us a holler...
800-223-4332
tech@corbin.com