

Part Number: HD-FXD-6-STNG, HD-DWG-6-STNG,
HD-FXD-FB-8-STN & HD-FXD-6-GAM



Description: Stinger & Gambler Saddle

Fitment: 2006-2008 Harley-Davidson Dyna-Glide & Wide-Glide

Revision: 4

Tools Required	Parts List
1/2" socket or combination wrench Torx 40 wrench 5/16 Open Wrench	1 #A00726 Front mounting bracket 1 #P10114 Latch pin 1 #P00545 Nylon cap 1 5/16 x 18 x 1.25" hex head bolt 1 5/16" lock washer

NOTE: We recommend the use of Loctite® or similar thread lock compound when assembling parts on your motorcycle.

1. Your new Corbin solo saddle installs a bit different than your stock seat in order to use a new key-lock system. Bracket installation is a one time deal, then your new saddle will go on and off with the included keys.

2. Start by removing your stock seat. Remove the stock 5/16 x 1" bolts on the chassis (*Figure 1A*). Install the front bracket #A00726, using the stock bolt & the supplied 5/16 x 18 x 1.25" hex head bolt and 5/16" lock washer (*Figure 1B*). Tighten to 8 ft. lbs. and don't forget to use Loctite®.

NOTE: Make sure the notched side of the bracket is facing forward.

3. Install the rear latch pin (#P10114) and nylon cap (#P00545) into the last hole on the rear fender. See *Figure 2*.

4. To install your Stinger saddle, simply place the rear of the saddle onto the latch pin on the rear fender. Then lower the front of the saddle onto the latch on the front mounting bracket you just installed and push down on the saddle until you hear two clicks.

NOTE: To ease installation until the rubber bumper on the basepan break in, it may be necessary to add a washer between the seat pan and latch bracket. This will make it easier to latch.

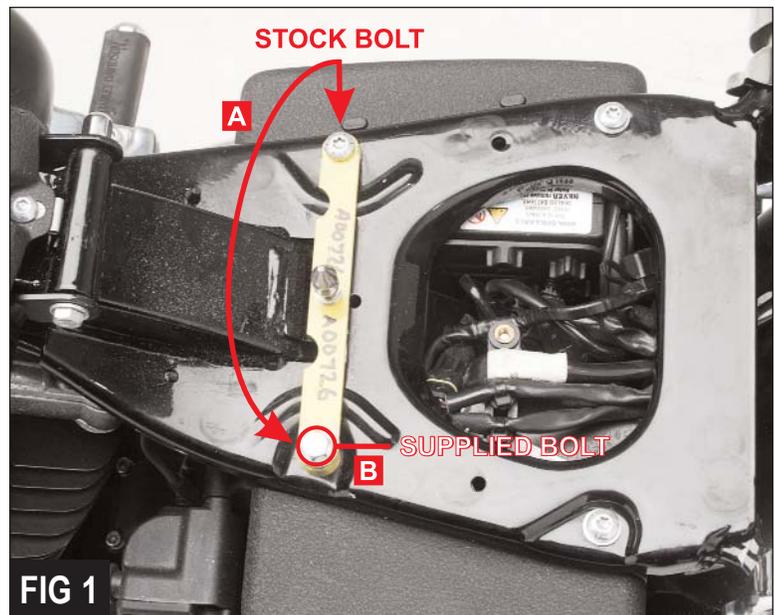


FIG 1



FIG 2

Questions? Give us a holler...
800-223-4332
tech@corbin.com