Part Numbers: HD-23CVO-FLIP(E)
Description: Rumble Seat
Fitment: 2023-2024 Harley-Davidson Road Glide & Street Glide
Revision: 2

Tools Required	Parts List
7/16” Open Wrench	1 #P01606 Latch Pin 1 #P00545 Nylon Cap 1 #P00102 Flat Washer ELECTRIC OPTION: 1 #HD-23-CVO WIRING HARNESS

1. Begin by removing your stock seat. Refer to your owners manual if necessary.

2. If you are installing a NON-heated seat, skip to step 5.

3. Installing the pigtail is simple. Just plug the provided pigtail into the Molex connector *(Figure 1)*, then plug the other end of the pigtail *(Figure 2)* into the Corbin saddle.

4. Your heated seat is ready for a test drive. The heater is controlled by the switch along the side of the saddle. Temperature will be controlled by an internal thermostat. The rider area is operated by the single switch. Heat will only operate when motorcycle ignition is ON and takes a couple minutes to warm up.

5. Screw the supplied latch pin and nylon cap into the rear thread nut of the rear fender *(Figure 3)*.

11. Install your seat by slipping the nose tab of the seat under the tab on the chassis, then line up the latch pin with the latch lock on the seat *(Figure 3)* and push down until you hear it click. Lift the rear of the seat upward to make sure it latched properly.

NOTE: Add the supplied washer to the bottom of the nylon cap if needed for seat to latch.

NOTE: New saddles are sometimes a little sticky to install because of the rubber bumpers on the bottom that have not broken in yet. You may need to apply a little pressure to get it to slide forward properly or you can use a little lubricant like WD40 or similar product.

If your motorcycle uses this passenger grabstrap setup, it must be removed before installing the Corbin saddle or it may damage your new seat. Each bracket is secured with a single 3/8 inch bolt.

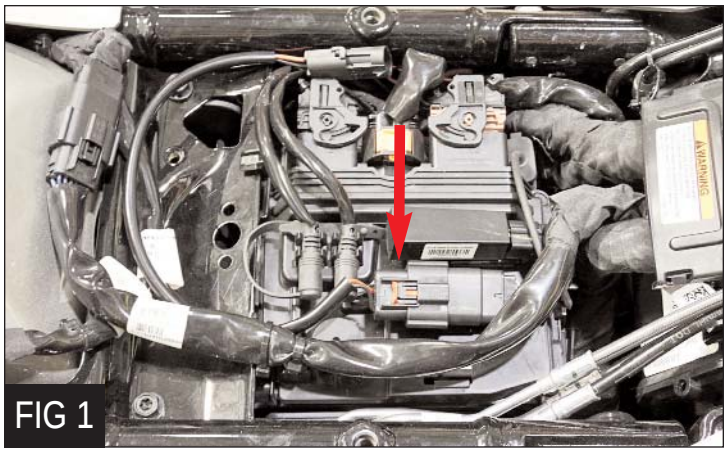
FIG 1

FIG 2

FIG 3

Questions? Give us a holler...

800-223-4332
tech@corbin.com