

Part Number: HD-LW-E

Description: Dual Saddle

Fitment: 2020 Harley-Davidson Livewire

Revision: 2




Tools Required	Parts List
T-25 torx wrench Phillips screwdriver Pick	1 #A01305 Hinge 1 #P11331 Latch Bracket 1 6mm Allen bolt 1 6mm Flat washer

NOTE: We recommend the use of Loctite® or other threadlock compound when assembling parts on your motorcycle.

1. Open seat.
2. Remove the two bolts on the front of the frame, using a T-25 torx wrench (*Figure 1*).
3. Remove tank panel by pulling up and out (*Figure 2*).
4. Using a pick, remove the C-clip on the seat hinge (*Figure 3*), then pull out the spring loaded bolt and washer (*Figure 4 & 5*).
5. Remove the two bolts on the seat hinge, using a T-25 torx wrench (*Figure 6*).
6. Remove seat.
7. Install the Corbin tank cover by sliding it into place and securing with the stock bolts and washers.
8. Install Corbin's rear hinge bracket by sliding it into place and securing with the stock bolts (*Figure 7*).

NOTE: Rear frame is a little flexible to help get the bracket in place.

9. Secure the bracket to the liner, using the provided 6mm Allen bolt and flat washer (*Figure 8*).

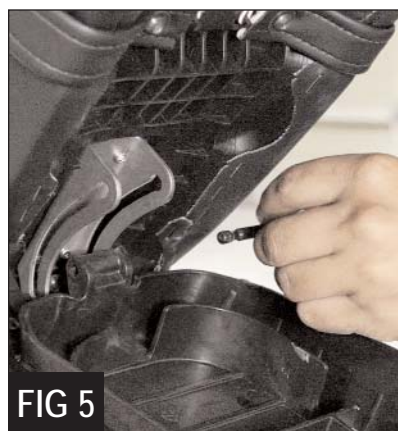

10. Install the Corbin seat onto the Corbin hinge bracket (*Figure 9*).

11. Hinge saddle down, pull lever and push the nose down until it engages. Slight adjustment is possible.

12. Remove the bottom bolt on the 12v battery cover (*Figure 10*).

13. Pull out battery, disconnect the negative wire, then disconnect the positive wire, using a Phillips screwdriver.

14. Route the provided pigtail down the frame behind the latch mechanism (*Figure 11*), leaving approximately 12" of wiring to connect to the saddle. Then route the pigtail down the side and through the cavity (*Figure 12*) and out towards the battery (*Figure 13*).

15. Zip tie wires so they are neatly out of the way. Do not over tighten as to not damage the wires.

16. Connect the red wire to the positive location and connect the black wire to the negative location (*Figure 14*).

17. Put the battery back in place and re-bolt the battery cover.

18. Plug pigtails together.



FIG 7



FIG 8



FIG 9



FIG 10



FIG 11



FIG 12



FIG 13

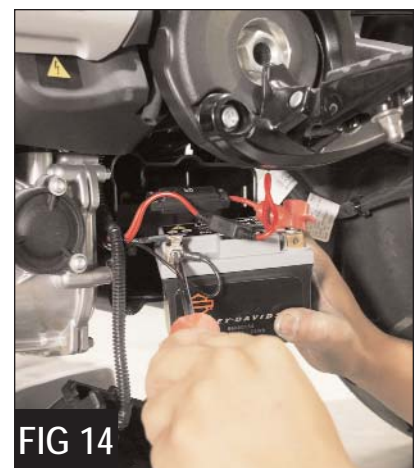


FIG 14

Questions? Give us a holler...
800-223-4332
tech@corbin.com