


Part Number: HD-PA-S(E) & HD-PA-R(E)
Description: Front and Rear Saddles
Fitment: 2021 Harley-Davidson Pan America
Revision: 1



Tools Required	Parts List
	1 Pan Wire Harness

1. Begin by removing your stock seat(s). Refer to your owners manual if necessary.


2. Corbin's front saddle mounts like stock and is secured in place by the rear seat (*Figure 1*). The rear saddle also mounts like stock using standard locations and secures front seat in place. Works on OEM key lock.

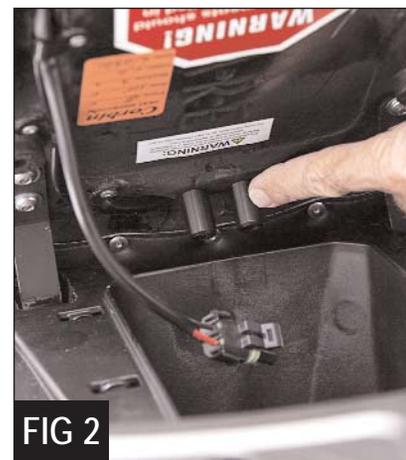

NOTE: When mounting the rear seat, the pins shown in *Figure 2*, must clear the front lip of the toolbox while lowering in place.

HEATER INSTALLATION:

1. If you ordered the heated model, we also included a wire harness that hooks into your OEM connector. So start by pulling out the wires from underneath the seat.

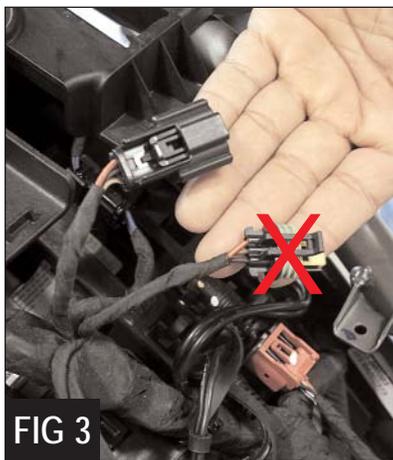


NOTE: Don't use the male / yellow connector (*Figure 3*).

2. Plug the Corbin wire harness into the OEM connector (*Figure 4*).

3. Next, plug into the Corbin seat (*Figure 5*).

WARNING!

Heater elements should NEVER be installed in motorcycle seats used by riders that cannot sense heat.

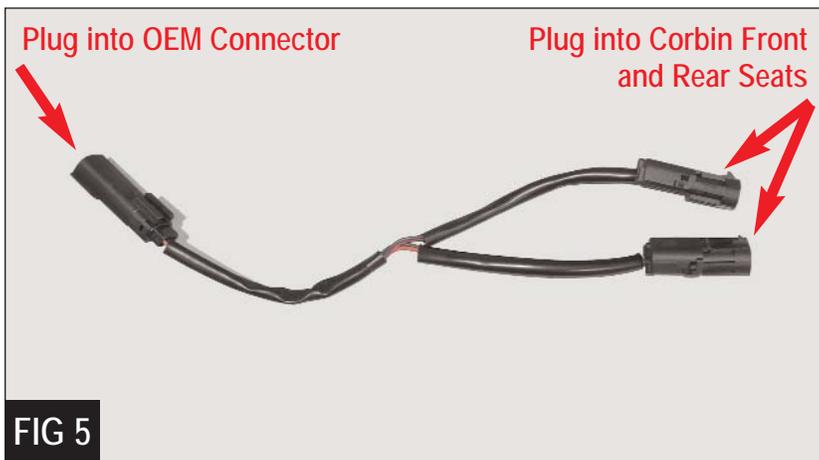

Questions? Give us a holler...
800-223-4332
 tech@corbin.com