

Part Number: LR-ST-LWR

Description: Softail Fairing Lower

Fitment: 2022+ Harley-Davidson Softail Low Rider ST

Revision: 1



Tools Required	Parts List
3/16 Allen Wrench 5/32 Allen Wrench 1/4 Allen Wrench	1 #A01401 Top Mounting Bracket 1 #A01400 Lower Mounting Bracket 2 #SP00253 1/4 x 20 x 1-1/4 Cap Bolts 4 #SP00997 1/4 x 20 x 3/4 Allen Bolts 4 #SP00139 1/4 x 20 x 1/2 Allen Bolts 4 #SP00153 1/4 Rubber Washers 6 #SP00214 1/4 Flat Washers 2 #SP00285 1/4 Lock Washers


NOTE: We recommend the use of a mild thread lock product such as Blue Loctite® when assembling parts on your bike.

1. Install the provided Top Mounting Bracket (#A01401) by removing two Allen bolts, using a 1/4 Allen wrench (*Figure 1*). Slip the bracket in between the bike frame and the fairing mounting bracket and secure with the stock bolts (*Figure 2*). Do not tighten yet.

2. Next install the provided Lower Mounting Bracket (#A01400). Using a 5/32 Allen wrench, remove the two Allen bolts off of the voltage regulator (*Figure 3*).


NOTE: You will not be reusing the stock bolts.

3. Position the Lower Mounting Bracket in between the bike frame and the voltage regulator and secure using the provided 1/4 x 20 x 1-1/4 Cap bolts with lock washers (*Figure 3*). Do not tighten yet.

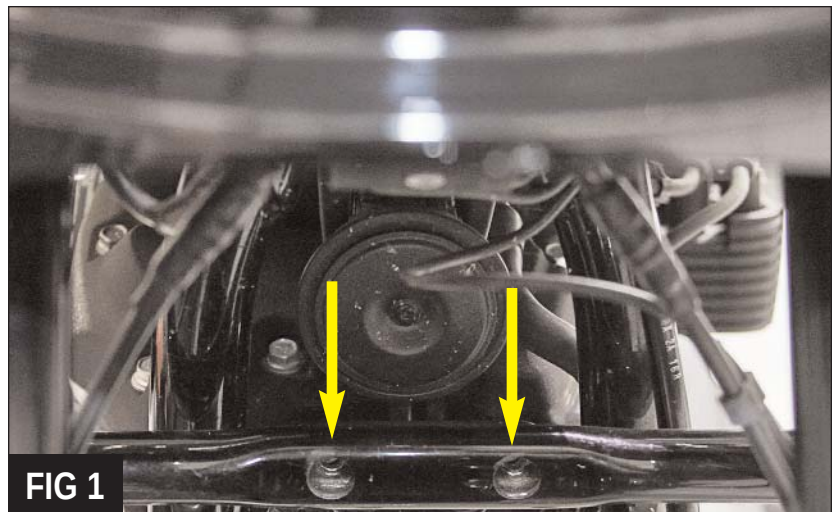

3. Slide the lower panels into place around the turn signal and mounting brackets you just installed and align the three mounting holes on the lower panel to the brackets. Secure the upper and lower exterior mounting locations with the provided 1/4 x 20 x 3/4 (longer) Allen bolts, rubber washers and flat washers (*Figures 4 & 5*). Then secure the top inner panel mounting location with the provided 1/4 x 20 x 1/2 (shorter) Allen bolts and flat washers (*Figure 6*).

NOTE: Top and lower mounting brackets can be loosened enough to wiggle slightly to get all bolts started and into place. Then go back and tighten all bolts firmly.

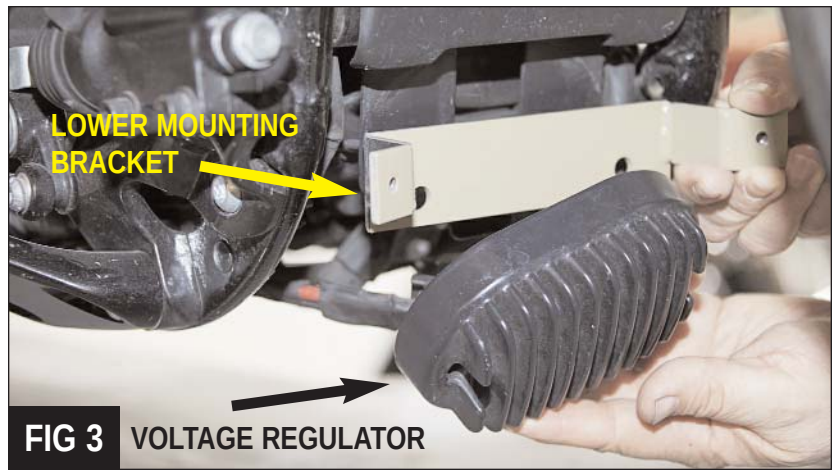

Questions? Give us a holler...
800-223-4332
tech@corbin.com