

Part Number: HD-XLN-22-S & HD-XLN-22-SMUG

Description: Classic Solo Saddle & Smuggler

Fitment: 2022 Harley Davidson Nightster

Revision: 1



Tools Required	Parts List
3/32 Allen Wrench 5/32 Allen Wrench	FRONT SEAT 1 #A01327 10 1/4" Long Cable Stop 1 #SP00201 8/32" Button Head Allen Bolt SMUGGLER 2 #SP01080 6mm Flat Washers 2 #SP00997 1/4" x 20 x 3/4" Allen Bolts 2 #SP01084 1/4 x 20 HD Fender Nut Insert

1. Start by removing the stock seat. Refer to owner's manual if necessary.

2. Install the Corbin saddle onto the stock location and secure with the stock bolts (*Figure 1*).

NOTE: Snug the bolts in place, close the saddle to get it properly aligned. Once aligned, then go back and tighten the bolts.

3. Loop the cable stop under the frame (*Figure 2*), then secure the other end to the saddle, using the supplied 8/32" button head Allen bolt, using a 3/32 Allen wrench (*Figure 3*).



4. To install your smuggler, simply insert the supplied fender nuts under the fender and secure with the supplied Allen bolts and flat washers, using a 5/32 Allen wrench (*Figure 4*).

NOTE: The rear of the smuggler is secured from under the fender and the front of the smuggler is secured above the fender.

NOTE: If the fender hole is hard to access, try threading a wire through the fender, hook the wire onto the fender nut and pull it up through the hole in the fender and secure with the "C" clip.

Enjoy!

Questions? Give us a holler...
800-223-4332
tech@corbin.com

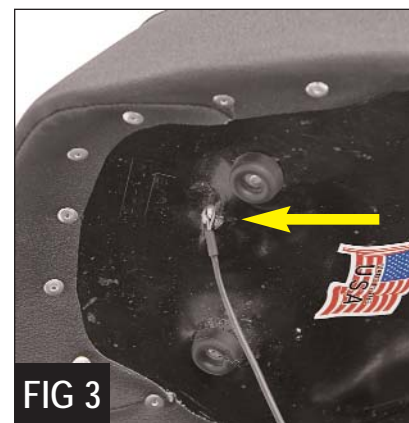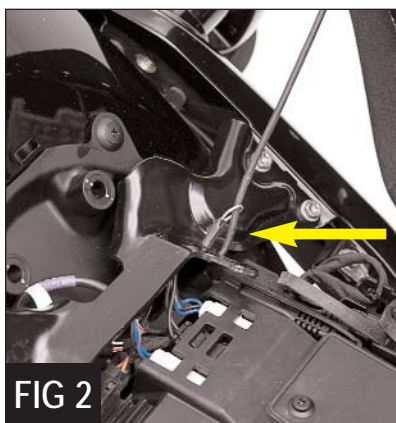

HD-XLN-22-S & HD-XLN-22-SMUG

PUT ON seat

A00497
QTY (1) Corbin bag hing
black finish



P11352
QTY (1) hinge mounting bracket
aluminum finish



SP01606
QTY (1) 1/4 x 20 latch pin
stainless



SP00272
QTY (1) flat washer
zinc finish



SP00139
QTY (4) 1/4 x 20 x 1/2 btn head allen
zinc finish



SP00267
QTY (4) 1/4 star washer
zinc finish



SP00285
QTY (1) 1/4 lock washer
zinc finish



SEND w/ front seat

A01327
QTY (1) 10 3/4" long cable stop
with shrink tube finish



SP00201
QTY (1) 8-32 x 1/2 btn head allen
zinc finish



SEND w/ smuggler

SP00997
QTY (2) 1/4 x 20 x 3/4 btn head allen
zinc finish



SP01080
QTY (2) 6mm washer
zinc finish



SP01084
QTY (2) 1/4 x 20 HD nut insert
zinc finish

