




# Hi-Capacity Saddlebag Doors #H-18-GW-DOOR Drill Template for Reflectors


**IMPORTANT**

Printers can resize output! To assure accuracy of this template please measure this paper and assure distance to hole centers is 5 1/8". Enlarge or reduce in copier if needed.

1. Cut out template on dashed line.
2. Place template on door as shown at lower right.
3. Mark hole location through template. Flip template over and repeat on opposite side.
4. Drill two hole locations using drill size shown.
5. Bolt on reflector using the stock nut and washer from inside the door. New double stick tape has been provided for the trailing edge.

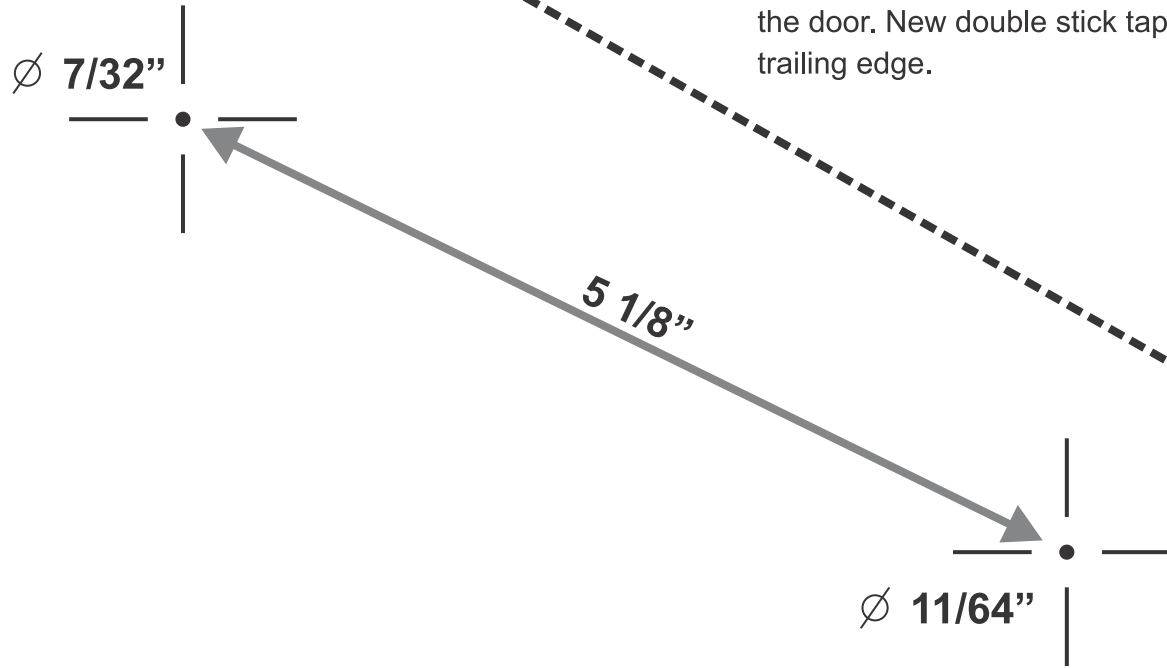

ACTUAL SIZE

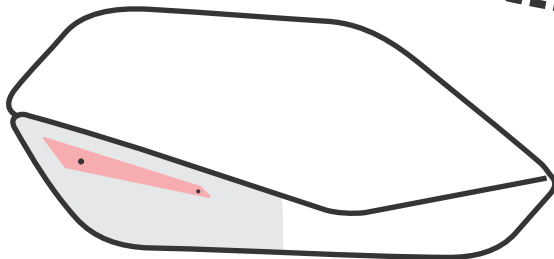

← FRONT