

Part Number: H-NT11-CDS(-E) & H-NT11-PAD
Description: Canyon Dual Sport Saddle & Trunkpad
Fitment: 2022 - 2026 Honda NT1100
Revision: 1



Tools Required	Parts List
10mm Socket or Combination Wrench Needlenose Pliers Side Cutters or Scissors (For Trimming Zip Ties)	1 #CB-PWR-HRN-36=12" Wiring Harness / Pigtail 1 #FACC-05 Small Fuse Adapter 1 Large Fusebox Rain Cover 1 8" Zip Ties


SADDLE INSTALLATION:

1. Remove your stock seats. Refer to your owner's manual if necessary.
2. Saddle mounts similar to stock and integrates with your Honda key lock system.
3. To install the seat without heater unit. Slip the front tab of your saddle under the front seat mount at the rear of the gas tank, align the rear Corbin bracket to the stock locking mechanism and push down on the saddle until you hear the lock click (*Figure 1*).



HEATER INSTALLATION:

1. If you ordered the heated model, we also included a wiring pigtail that hooks into your stock fusebox, so start by removing the fusebox cover.
2. Remove the 10 amp fuse from the CORNER LIGHT / ACC position (*Figure 2*) and insert the fuse into the adapter at the end of the wiring pigtail (*Figure 3*).
3. Insert the adapter in the space previously occupied by the 10amp CORNER LIGHT / ACC fuse and then plug the two pigtails together (*Figure 4*).
4. With the pigtail in place, the fuse box cover won't close, so close the fuse box cover loosely then cover the entire fuse box with the rain cover (*Figure 5*).

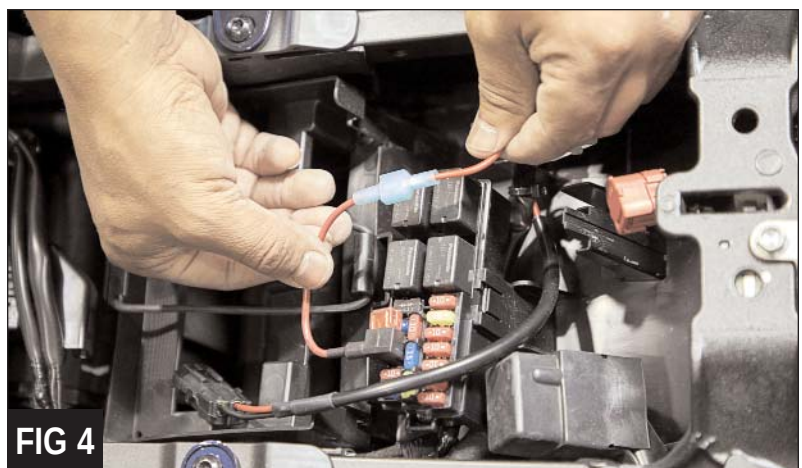

5. Find a convenient place to ground the negative lead of the pigtail to your chassis. We used the spot shown in *Figure 6*, but any location with good contact to ground will work fine

6. Bundle loose wiring and secure with the included zip ties (*Figure 7*). Do not tighten excessively or you may damage the wiring... just secure it in place for cleanliness.

7. Be sure you have left enough wire on the wiring harness to reach the seat.

8. Plug the wiring harness into the seat and test. To do this, turn on your ignition switch and flip the switch on the saddle. If the switch illuminates, the saddle heater is working.

9. Proceed with saddle mounting as outlined above.

Enjoy your new saddle!

NOTE: The heater is controlled by the switch along the side of the saddle. The temperature is regulated by an internal thermostat when the heater switch is turned on.

TRUNKPAD INSTALLATION:

1. Remove the stock trunkpad by prying the top part off from the adhesive, then pull up and out (*Figures 8 & 9*).

NOTE: Shown without foam for instruction purposes.

2. To install the Corbin trunkpad, you will first need to clean any residue on the trunk. Then peel the tape liner from the back of the trunkpad and install the same way as the stock trunkpad.

Questions? Give us a holler...
800-223-4332
tech@corbin.com



FIG 5



FIG 6

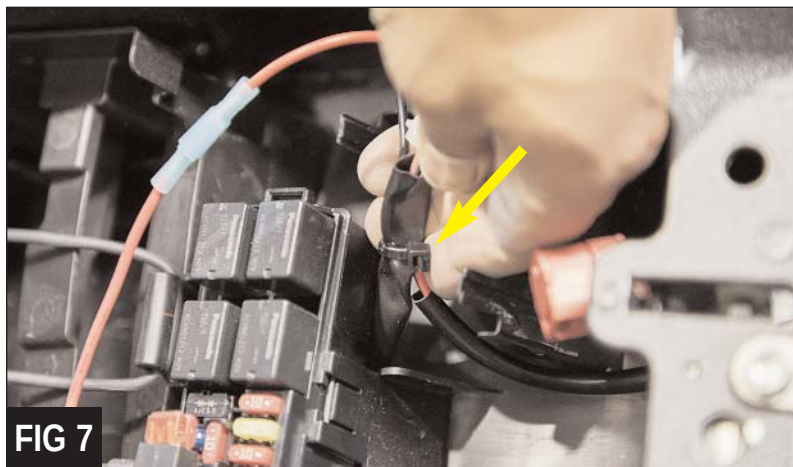


FIG 7

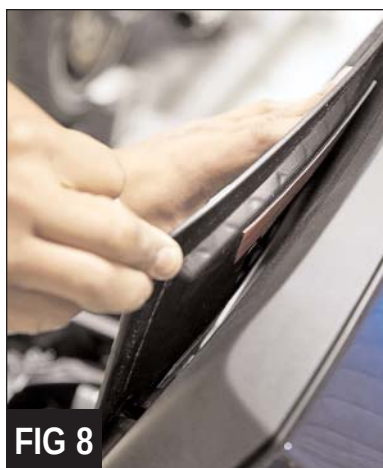


FIG 8

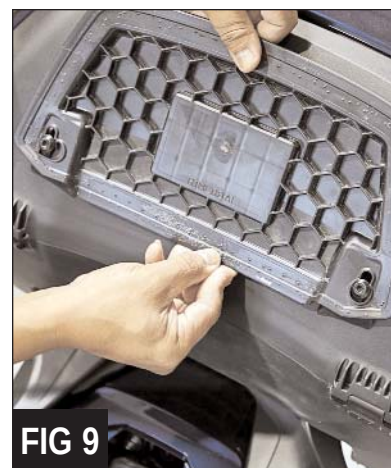


FIG 9