

Part Number: I-26-VC-NCL

Description: Headlight Nacelle

Fitment: 2026 Indian Chief Vintage

Revision: 1

Corbin

Tools Required	Parts List
4mm Allen Wrench T-25 Torx Wrench	1 Headlight Nacelle 4 #SP00974 m6 x 16 Button Head Cap Screws 4 #SP00214 1/4" SAE Flat Washers - Stainless

NOTE: We highly recommend using a medium strength thread lock product, such as Blue Loctite®, on all of the bolts when installing your Corbin Headlight Nacelle.

1. Start by removing the six 6mm bolts on the fork tube cover, using a T-25 torx wrench (*Figure 1*).
2. Slide the Corbin Headlight Nacelle in place, starting from the bottom, then up (*Figure 2*).
3. Secure the Corbin Headlight Nacelle on to the fork tubes cover with the supplied m6 x 16 button head cap screws and 1/4" SAE flat washers, using a 4mm Allen wrench (*Figure 3*). Don't forget the Blue Loctite® and do not over tighten.

Enjoy!

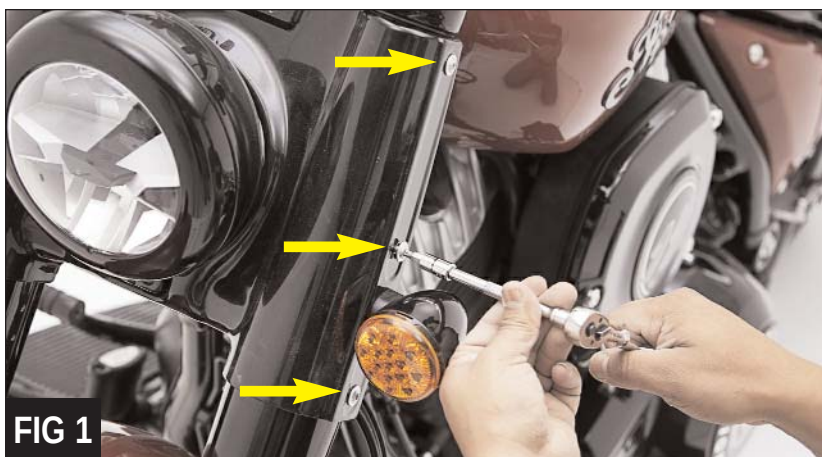


FIG 1



FIG 2



FIG 3

Questions? Give us a holler...
800-223-4332
tech@corbin.com