

Part Number: I-C-SBAR

Description: Sissybar

Fitment: 2022-2025 Indian Chief Models

Revision: 1

Corbin

Tools Required	Parts List
6mm Allen Wrench	1 Sissybar 4 #SP00215 5/16" Washers 4 #SP00257 Lock Washers 4 #SP02665 8m x 35 x 1.25 Allen Bolts

NOTE: We highly recommend using a medium strength thread lock product, such as Blue Loctite®, on all of the bolts when installing your Corbin Sissybar.

1. Start by removing your stock seat. See owner's manual if necessary

In the following steps, we recommend you cover your fender with a towel and get a second pair of hands to help hold the fender and guard from scratching the paint (*Figure 1*).

2. Remove the left and right front bolts and fender spacers, using a 6mm Allen wrench.

NOTE: Fender spacers will be reused, but not the bolts.


3. To install the sissybar, spread open the sissybar and gently put it in position, being careful to not scratch the paint. Slip the OEM fender spacer between the fender and sissybar (*Figures 2 & 3*) and secure with the provided washer, lock washer and 8m x 35 x 1.25 Allen bolts. Get the bolts started, but do not tighten yet.

4. Remove the left and right rear bolts and fender spacers, using a 6mm Allen wrench.

NOTE: Fender spacers will be reused, but not the bolts.

5. Slip the OEM fender spacer between the fender and sissybar (*Figures 2 & 3*) and secure with the provided washer, lock washer and 8m x 35 x 1.25 Allen bolts. Get the bolts started, but do not tighten yet.

6. Remove the towel and tighten all four bolts.

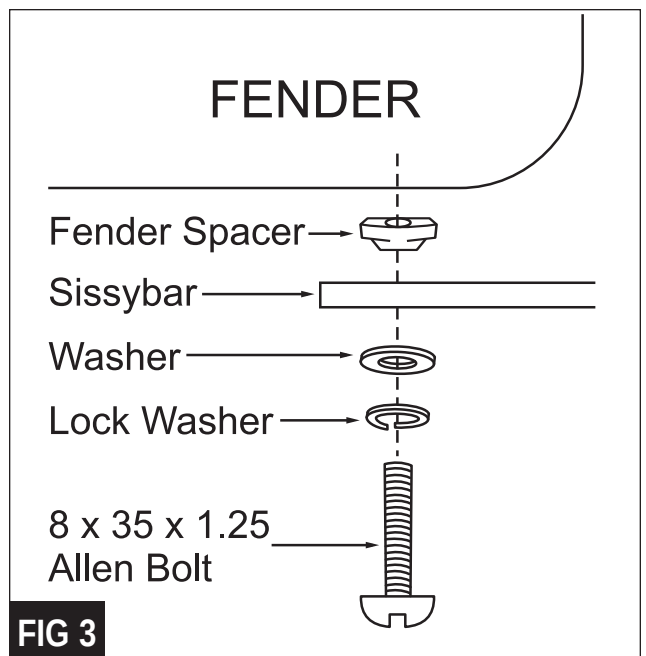

Questions? Give us a holler...
800-223-4332
tech@corbin.com