

Part Number: I-FTR-12-G
Description: Gunfighter Saddle
Fitment: 2019-2020 Indian FTR 1200
Revision: 1



Tools Required	Parts List
T-40 Torx Wrench 6mm Allen Wrench	

1. Start by removing the stock seat using a T-40 torx wrench and 6mm Allen wrench.
2. Remove the bolts on the handrails to expose the seat bolts, using a T-40 torx wrench.
3. Remove the two bolts securing the seat, using a 6mm Allen wrench.
4. Remove the seat.

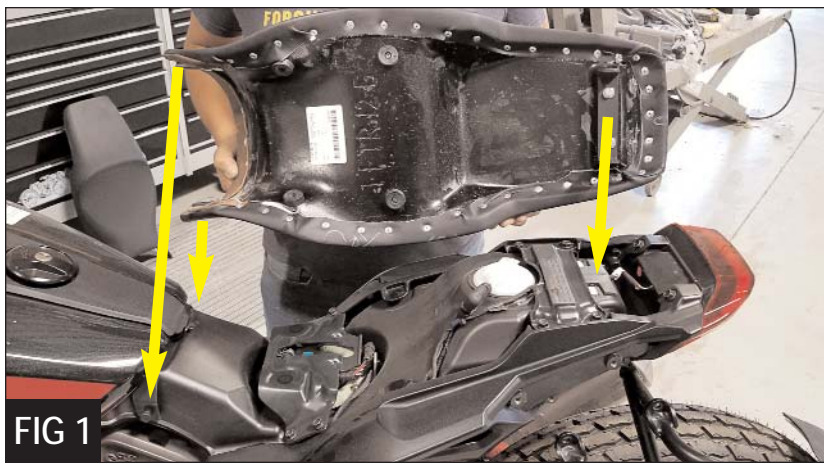


FIG 1

5. Saddle mounts like stock and bolts directly to the Indian subframe just like the OEM seat. Mounting brackets are included and come pre-installed on the seat (*Figure 1*).

6. To install your new Corbin saddle, start by sliding the two front tabs under the OEM mounting pegs (*Figure 2*), making sure its pushed all the way forward. Next lower the rear of the seat and secure with the stock bolts.



FIG 2

NOTE: The rear bracket is adjustable (*Figure 3*).

NOTE: Put WD40 on the rubber grommets to help slide the seat forward

7. Reinstall the handrails.

Enjoy your new saddle!

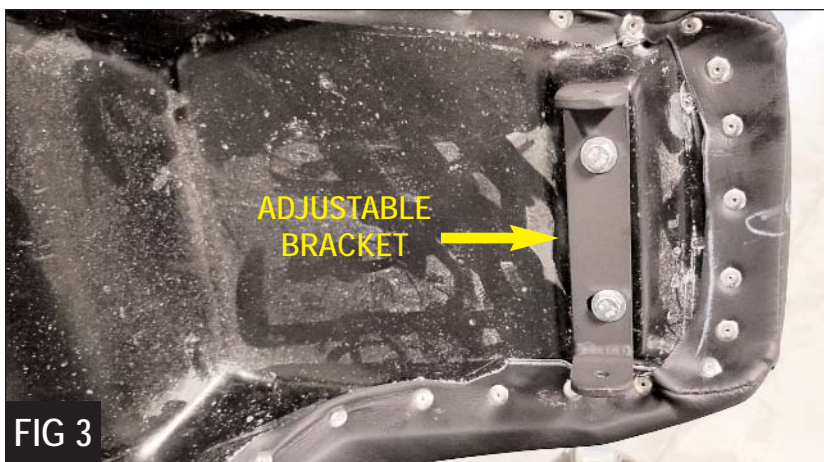


FIG 3

Questions? Give us a holler...
800-223-4332
tech@corbin.com