

**Part Number:** I-S-E, I-50S & I-RACK-BRKT

**Description:** Solo Saddle & Pillion

**Fitment:** 2014 + Indian Chieftain

**Revision:** 3




Tools Required	Parts List
5mm Allen Wrench	3 #SP00215 5/16" Flat Washers 3 #SP00248 m8 x 16 Button Head Allen Bolts 4 #SP00632 8mm Flat Head Allen Screws 1 #P00244 Pillion Bracket 1 #A01208 Luggage Rack Adapter Bracket 1 Indian Extension Wiring Pigtail (2018+ Models) 1 Zip Tie

1. Begin by removing your stock seat(s). Refer to your owners manual if necessary.

**NOTE:** It's easier to remove the side covers when the saddle bags are open.

**Heater Installation:**

2. Remove side covers.

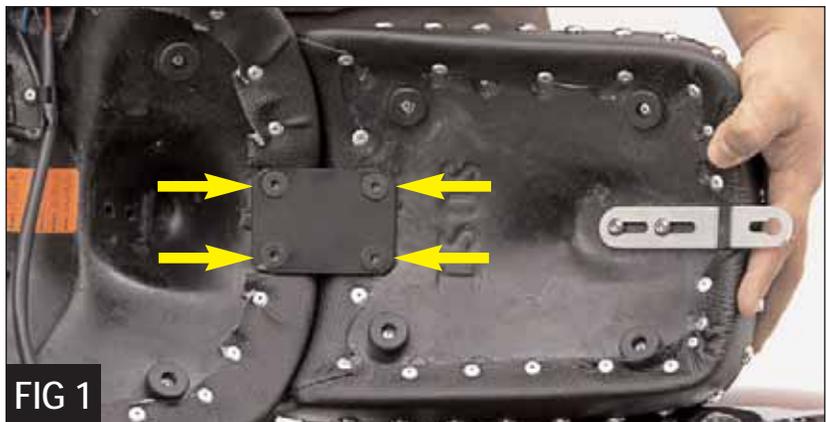

3. If using the pillion pad, bolt the pillion onto the solo seat, using the provided 8mm flat head Allen screws, securing with a 5mm Allen wrench. (Figure 1)

**NOTE:** Rear tab is adjustable.

4. Plug the wiring pigtail on the Corbin saddle into the stock green wiring pigtail (Figure 2).



**If your bike doesn't have this plug then...**

4. Plug the provided wiring pigtail into the stock wiring pigtail that's near the fender (Figure 3).

5. Plug the wiring pigtail you just installed into the wiring pigtail on the Corbin seat (Figure 4). Flip the switch on the saddle. If the switch illuminates, the saddle heater is working.



**NOTE:** The heater is controlled by the switch along the side of the saddle. The temperature is regulated by an internal thermostat when the heater switch is turned on.

5. If using the Concert Saddle Bag Audio Kit, you need to mount the speaker amp to the Corbin bracket, then mount the Corbin bracket into place, using the stock bolts and washers (*Figure 5*).

6. To install your solo saddle with pillion, slide the tabs on the solo saddle into place, slowly lower the seat and pillion down and secure the pillion with the provided 5/16" flat washer and 8mm Allen bolt (*Figures 6*).

7. Solo saddle installs with a tab in the front and two bolts through the sides into stock locations on your bike. Secure the side brackets with the provided 5/16" flat washers and 8mm Allen bolts (*Figure 7*). Bolts are hidden by the leather fringe on the saddle.

8. Reinstall side covers.

### Luggage Rack Installation:

9. If you have the Corbin Solo Saddle and Pillion, leave the bracket in place and remove the pillion, using a 5mm Allen wrench.

10. If you do not have Corbin's Pillion, install bracket #P00244 onto the Solo Saddle, using the provided 8mm flat head Allen screws, securing with a 5mm Allen wrench (*Figure 8*).

11. Install Luggage Rack Adapter Bracket (#A01208) onto bracket #P00244, using the provided 8mm flat head Allen screws, securing with a 5mm Allen wrench (*Figure 9*).

12. Install the luggage rack onto the Corbin bracket and secure with the stock bolts and flat washer (*Figure 10*). Do not tighten yet, just snug the bolts. Use Loctite®.



13. Install the solo saddle and luggage rack by sliding the tabs on the solo saddle into place, slowly lower the seat and luggage rack down and secure the luggage rack with the provided 5/16" flat washer and 8mm Allen bolt or stock bolt (Figure 11).

14. Secure the side brackets on the solo saddle with the provided 5/16" flat washers and 8mm Allen bolts or stock bolts. Bolts are hidden by the leather fringe on the saddle (Figure 7).

15. Tighten luggage rack bolts.

16. Reinstall side covers.

Enjoy your new saddle!



FIG 8



FIG 9



FIG 10



FIG 11

Questions? Give us a holler...  
**800-223-4332**  
tech@corbin.com