

**Part Number:** KTM-1190-A(E)

**Description:** Canyon Dual Sport Saddle



**Fitment:** 2014-2019 KTM 1190 & 1290 Adventure, Adventure R, Super Adventure

**Revision:** 2

Tools Required	Parts List
10mm Socket Wrench	1 KTM Wiring Harness 1 Zip Tie

Saddle mounts to your KTM just like stock with brackets preinstalled on the Corbin seats.

1. Remove stock seat.
2. To install the Corbin saddle, simply slide the saddle into place nose first to engage the tongues and lower the rear into place. Push firmly on the passenger platform to latch. (Figure 1)



FIG 1

#### HEATER INSTALLATION:

##### With Factory Wiring

1. Install your heated seat by first plugging the connectors on the Corbin seat to the connectors on the bike (Figure 2 & 3), then test the switch for proper function.
2. Proceed with saddle mounting as outlined above.
3. To release use the stock key.

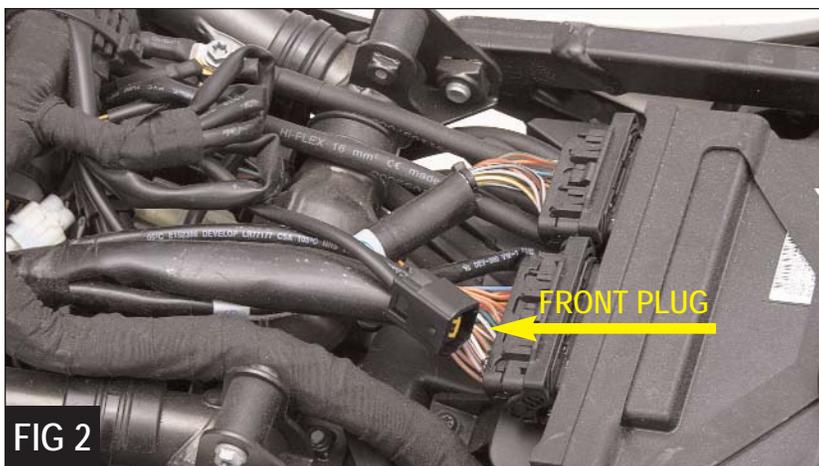


FIG 2

##### Without Factory Wiring

1. Included with your electric heated seat you will find a short wiring pigtail with built in fuse (Figure 4).
2. Connect the red wire with built in fuse to the stock black with red stripe connector under the tail section (Figure 5).
3. Using a 10mm socket wrench, disconnect the battery negative terminal, then attach the negative wire to the battery (Figure 6).



FIG 3



4. Route the pigtail to assure no wires will be pinched and secure with zip ties... just secure it in place for cleanliness (*Figure 7*).

5. You are now ready to install your saddle. Simply plug the wiring harness into the seat and test. To do this, turn on your ignition switch and flip the switch on the saddle. If the switch illuminates, the saddle heater is working.

6. Install the saddle as outlined above.

**NOTE:** The heater is controlled by the switch along the side of the saddle. The temperature is regulated by an internal thermostat when the heater switch is turned on.

Enjoy your new saddle!

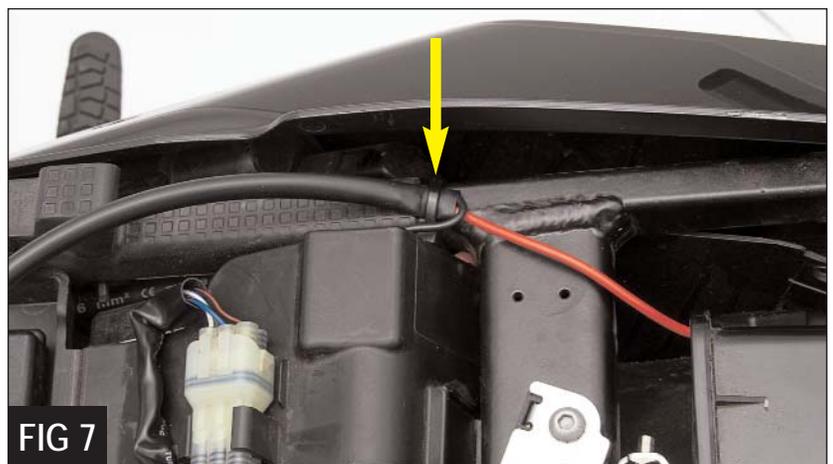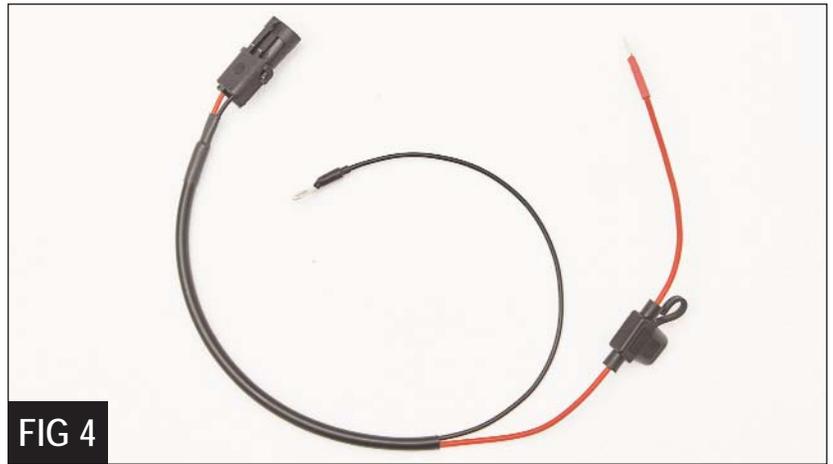

Questions? Give us a holler...  
**800-223-4332**  
tech@corbin.com