

Part Number: MG-MGX21-S(E) & MG-MGX21-P

Description: Front Saddle & Passenger Pillion

Fitment: 2017 Moto-Guzzi MGX 21

Revision: 1

Corbin

Tools Required	Parts List
4mm Allen Wrench 10mm Socket Wrench Needle Nose Pliers	1 #SP02029 Mini Fuse Adapter 1 #SP02028 Mini Fuse 1 #CB-PWR-HRN-36-12" Wiring Harness 1 6" Zip Ties

SADDLE INSTALLATION:

1. Remove your stock seats. Refer to your owner's manual if necessary.
2. Saddles mount just like stock with brackets preinstalled on the saddle.
3. To install the pillion pad, simply slide the tongue into place (*Figure 1*), then secure with the stock bolts (*Figure 2*).
4. To install the front saddle, slip the two front tongues of your saddle into place, align the Corbin latch pin to the stock locking mechanism and push down on the saddle until you hear the lock click (*Figure 3*).



HEATER INSTALLATION:

1. If you ordered the heated model, start by disconnecting the battery negative terminal, using a 10mm socket wrench.
2. We also included a wiring pigtail that hooks into your stock fuse box. Remove the fusebox cover.
3. Remove the 15 AMP fuse from the #6 position (*Figure 4*) and insert the fuse into the adapter at the end of the wiring pigtail (*Figure 5*).
4. Insert the adapter in the space previously occupied by the 15 AMP fuse (*Figure 6*), then resecure the fuse box cover.
5. Remove the bolt on the location shown in *Figure 7* and attach the ground wire.



6. Bundle loose wiring and secure with the included zip tie. Do not tighten excessively or you may damage the wiring... just secure it in place for cleanliness. (Figure 8)

7. Plug the pigtail into the fuse adapter (Figure 9).

8. Reconnect the battery negative.

9. Connect seat plug to the pigtail.

10. Test the seat. To do this, turn on your ignition switch and flip the switch on the saddle. If the switch illuminates, the saddle heater is working.

11. Proceed with saddle mounting as outlined above.

Enjoy your new saddle!

NOTE: The heater is controlled by the switch along the side of the saddle. The temperature is regulated by an internal thermostat when the heater switch is turned on.

WARNING!

Heater elements should NEVER be installed in motorcycle seats used by riders that cannot sense heat.

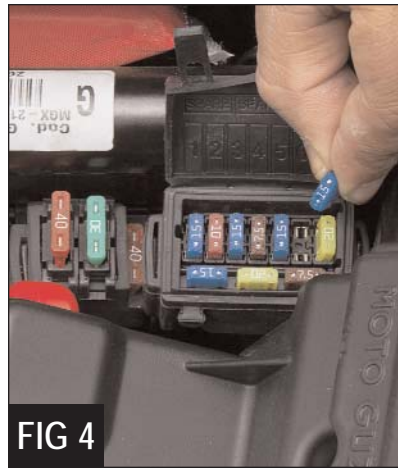


FIG 4



FIG 5



FIG 6

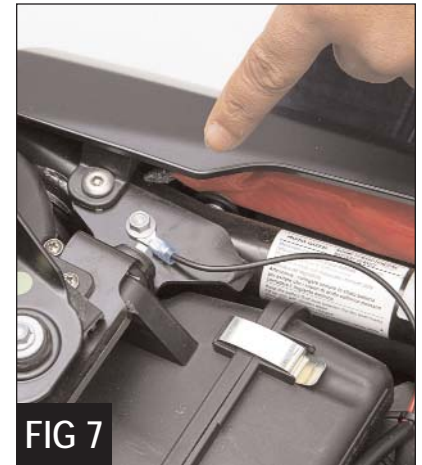


FIG 7



FIG 8

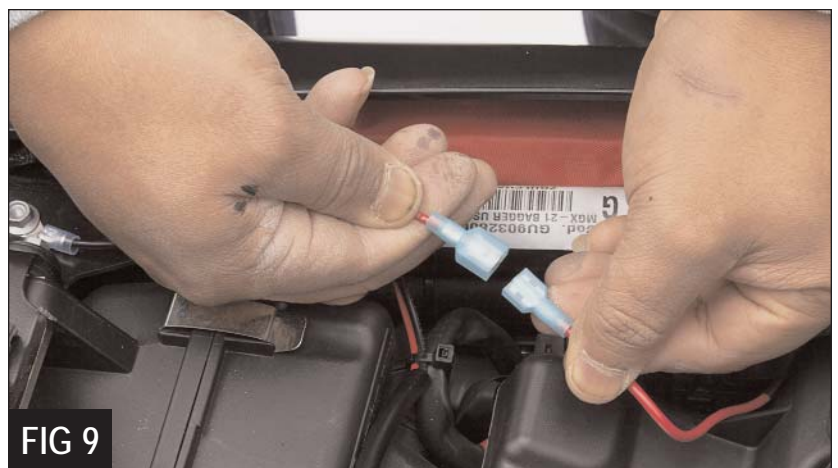


FIG 9

Questions? Give us a holler...
800-223-4332
tech@corbin.com