

Part Number: S-BURG-65-12

Description: Dual Saddle

Fitment: Suzuki Burgman 650 & 650 Executive

Revision: 1



Tools Required		Parts List
4mm Allen wrench	Phillips screwdriver	4 6x16 hex head bolts #P00104
8/32" Allen wrench		4 6mm flat washer #P00102
Flathead screwdriver		6 8-32 Allen bolts #P00201
Needlenose pliers		4 3-16 "P" clamps #P00263
10mm Combination wrench		1 Latch bracket #A0017

NOTE: We highly recommend using a removable strength thread lock product such as Loctite® on the bolts when installing your saddle.

You can install this saddle alone, but to make it easier to manage, it would be helpful to enlist the help of a buddy to support the saddle during the installation.

1. Open the stock seat and pop the pin off of the gas shock, using needlenose pliers or a screwdriver (Figure 1).



FIG 1

2. Disconnect the gas shock from the bracket. (Figure 2)



FIG 2

3. Lift seat up and disconnect the light plug (Figure 3).



FIG 3

4. Using a 10mm combination wrench, remove the nuts on the front bracket (Figure 4).



FIG 4

5. Pull out the seat and rest on the frame upside down.

6. Remove light cover, using a flathead screwdriver (Figure 5).

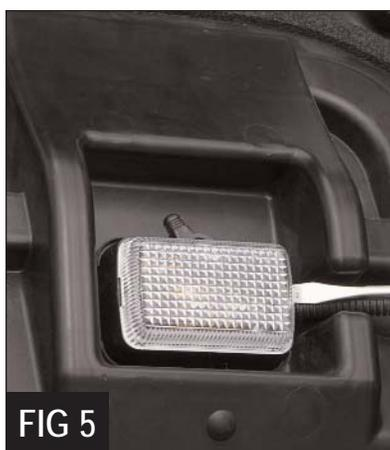


FIG 5

7. Remove the two bolts on the light housing, using a Phillips screwdriver (Figure 6).

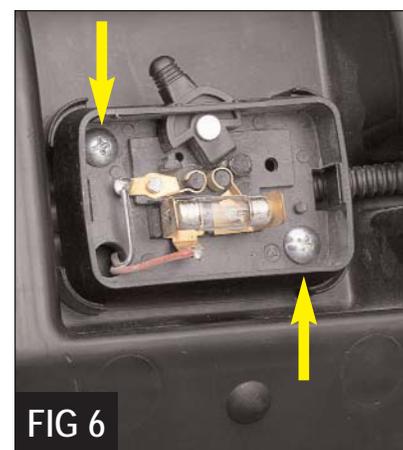


FIG 6

8. Pull the cable out from the seat (Figure 7).

9. Remove the two Allen bolts on the Corbin saddle (Figure 8). Transfer the light housing onto the Corbin saddle and secure the lamp housing with the bolts you just removed, using a 8/32" Allen wrench (Figure 9).

10. Re-install the lamp cover.

11. Route the wiring harness through the "P" clamps (Figure 10).

NOTE: It might be easier to loosen the bolts on the "P" clamps, run your wiring harness through, then re-tighten the bolts.

12. Remove the two hex head bolts and flat washers on the bottom front of the Corbin saddle. (Figure 11).

13. Your new saddle is now ready to install onto your scooter. Your Corbin saddle will attach to the hinged mounting bracket the same as the OEM seat. Position the Corbin saddle onto your scooter, lift up and secure with the bolts you just removed from the Corbin saddle. Secure tightly. (Figure 12)

14. Plug light plug back in and push down the cable out of the way to avoid damage.

15. Remove the shoulder bolt on the seat (Figure 13).

16. Lower seat and secure the shock with the shoulder bolt, using a 4mm Allen wrench (Figure 14).

16. To latch the seat, firmly press the seat down over the latch to lock into place. Now you're ready to jump on and take it out for a test ride - ENJOY!!



FIG 7

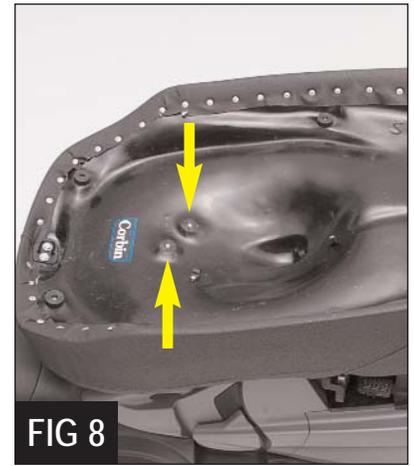


FIG 8

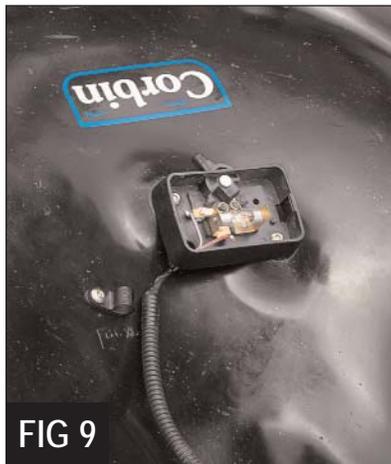


FIG 9

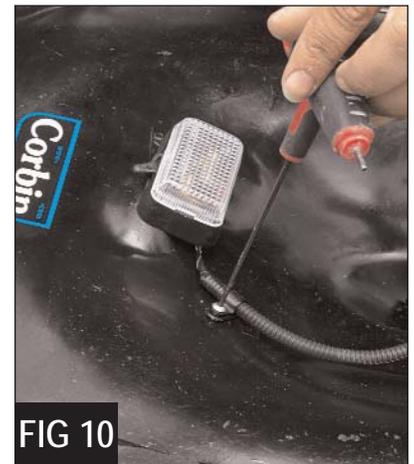


FIG 10

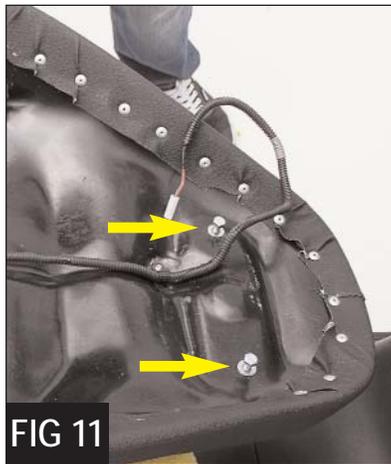


FIG 11

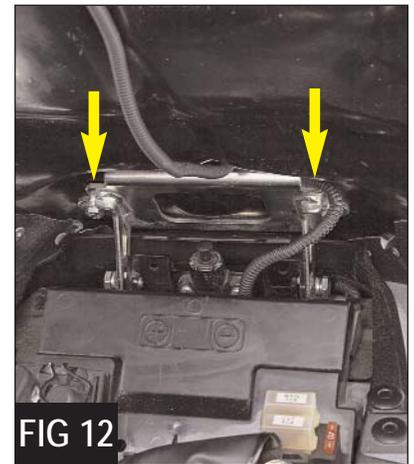


FIG 12



FIG 13

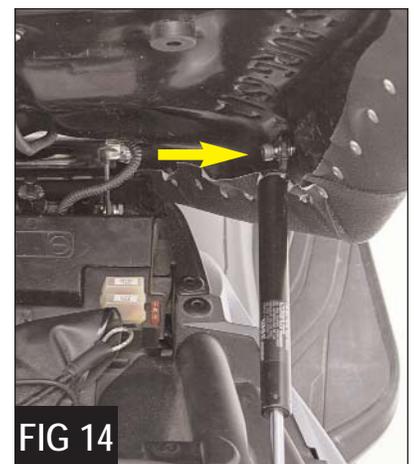


FIG 14

Questions? Give us a holler...
800-223-4332
tech@corbin.com