

Part Number: T-R3-20-Bag

Description: Fleetline Saddlebags

Fitment: 2020 Triumph Rocket III

Revision: 1



Tools Required	Parts List
2 13mm Socket Wrenches	1 #A01300 Mounting Bracket 4 #SP00231 8m x 20mm x 1.25 Hex Head Bolts 4 #SP00297 5/16" Lock Washers 4 #SP00215 5/16" Flat Washers 2 #SP00759 8mm Hex Head Bolts 4 #SP00215 8mm Washers 2 #SP00076 8mm Nylock Nuts 6 #SP00109 3/8" Flat Washers 6 #SP00157 Lock Washers 6 #SP00198 3/8" Chrome Acorn Nuts

NOTE: We recommend the use of a thread lock product such as Loctite® when assembling parts on your motorcycle.

1. If the Corbin fender is already in place from a prior installation, you will need to remove the two rear most bolts that go into your sissybar or fender blanks (*Figures 3 & 4*).

2. Slide mounting bracket in place (*Figure 1*) and secure the middle mounting position with the provided 8mm hex head bolts, 5/16" lock washers and 5/16" flat washers (*Figure 2*). Do not tighten.

3. Next secure the front mounting position with the provided 8mm hex head bolts, 5/16" lock washers and 5/16" flat washers (*Figure 2*). Do not tighten.

4. Secure the rear mounting position through the fender support with the provided 8mm hex head bolts and 8mm flat washers from underneath (*Figure 3*) and 8mm flat washers and 8mm nylock nuts on the top (*Figure 4*). Do not tighten.

NOTE: If you have the sissybar, you won't be using the nylock nuts. The bolt threads directly into the sissybar support bracket.



FIG 1

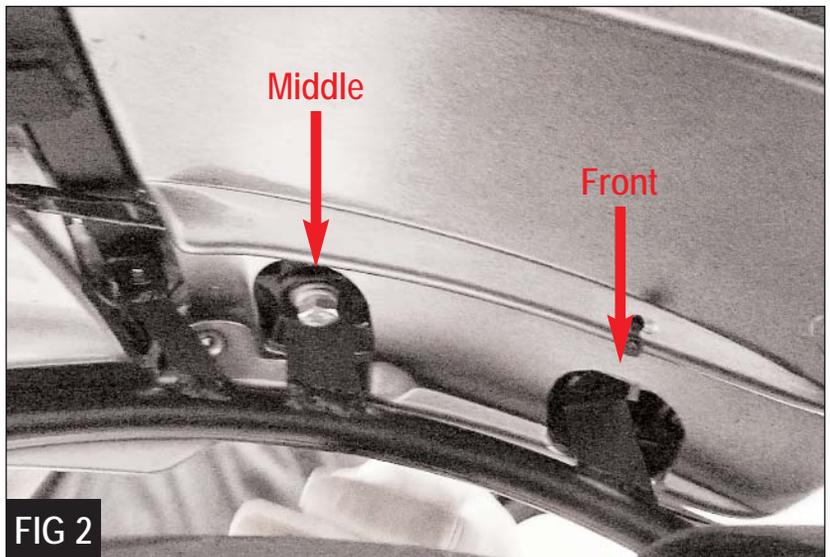


FIG 2

5. Now tighten the front and middle bolts and then the rear bolts.

6. Open the saddlebag and slide the bag onto the three mounting points (*Figure 5*). Secure the bag with the 3/8" flat washer, followed by a lock washer and then the acorn nut. Apply a little Loctite® and tighten to 8 ft lbs. (*Figure 6*)

7. Repeat on the other side.

SOME TIPS:


1. Place heavy items in carefully. Throwing a disk lock or similar item into your bag can result in paint cracks on the outside.

2. Load heaviest items closest to the bike with lighter items outboard. This will keep the best balance and center of gravity possible.

3. As with all motorcycle luggage, pad delicate items to protect them from harm during transportation.

4. Watch that bag! Until they are used to them being there, many people kick the bags the first few times they throw a leg over the bike after installation. Try to remember your spiffy new bags are there so you won't be kicking yourself later for the scratches.

5. Most importantly... go have some fun and ride safely!

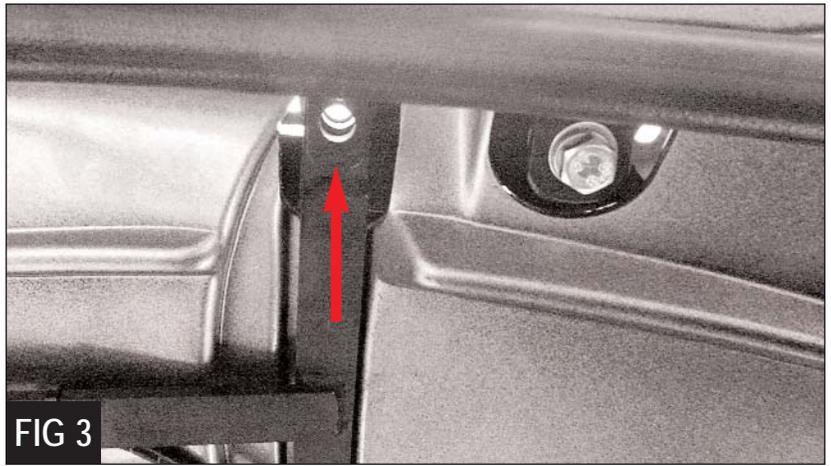

Questions? Give us a holler...
800-223-4332
tech@corbin.com