

Part Number: T-R3-20-DT(E) & T-R3-20-G(E)

Description: Dual Tour & Gunfighter Saddles

Fitment: 2020 Triumph Rocket III

Revision: 1



Tools Required	Parts List
Phillips Screwdriver	1 Wiring Harness Fuse Link 12"

1. To install your new Corbin saddle, you're first going to have to remove the stock seat. Use your owner's manual if necessary.

2. Install the included pigtail. This is a one time installation that can stay on the bike even when you remove the saddle.

3. Included with your electric heated seat you will find a short wiring pigtail with built in fuse. Installation of this pigtail is simple and mounts directly to your battery.

4. Connect as follows (*Figure 1*).

- a. Disconnect negative lead from battery.
- b. Disconnect positive lead from battery and reinstall along with red (fuse) lead from pigtail.
- c. Reconnect negative lead along with black lead of pigtail.
- d. Assure both terminals are tightened securely.

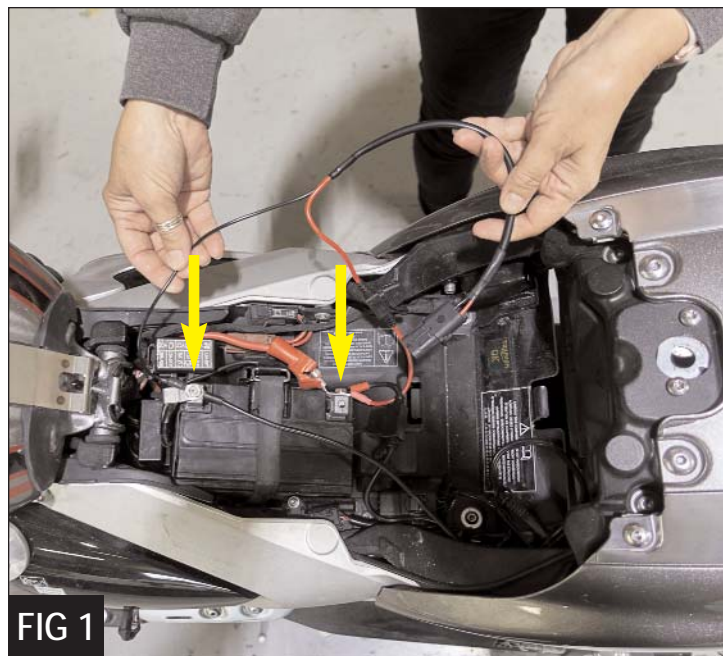


FIG 1

5. Next, reach under the saddle and plug the pigtail into the seat wiring. Turn the ignition switch on and flip on the seat heater. If the heater switch illuminates, then your wiring is fine and you're ready to move on.

6. To install your Dual Touring Saddle, simply slide the saddle into place nose first to engage the tongue, lower the rear into place and push firmly on the passenger platform to latch (*Figure 2*).

Enjoy your new saddle!

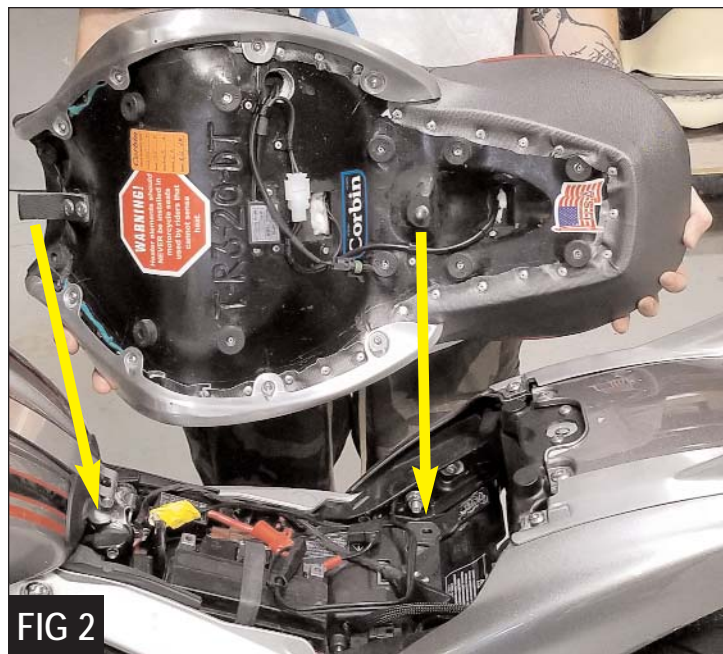


FIG 2

Questions? Give us a holler...
800-223-4332
tech@corbin.com