

Part Number: TR3-PAD

Description: Sissy Bar Pad

Fitment: 2020 Triumph Rocket III

Revision: 1



Tools Required	Parts List
3mm Allen Wrench Phillips Screwdriver	1 Backing Plate 1 #P11328 Angled Bracket 1 #P11329 Flat Bracket 4 #SP00974 6mm x 35 Button Head Allen Bolts 2 #SP00242 10-24 Phillips Bolts 4 #SP01080 1/4 x 20 Flat Washers

1. Remove the stock back plate by removing the four bolts, using a 3mm Allen wrench (*Figure 1*).



2. Remove the two bolts on top of the bracket, using a 3mm Allen wrench (*Figure 2*). Remove bracket and bolts (*Figure 3*).

NOTE: It's easier to remove the bolts if the sissy bar pad is in the high position.

3. Squeeze the tab on the sissy bar pad, slide up and out (*Figure 4*).



4. Install the angled bracket (#P11328) on to the sissy bar and secure with the stock bolts (*Figure 5*).

5. Install Corbin's sissy bar pad onto the angled bracket and secure it with the provided 6mm button head Allen bolts and flat washers (*Figure 6*).

6. Install the flat bracket (#P11329) onto the sissy bar and sissy bar pad and secure it with the provided 6mm button head Allen bolts and flat washers (*Figure 7*).



7. Next, install the back plate and secure it with the provided 10-24 Phillips bolts (*Figure 8*).

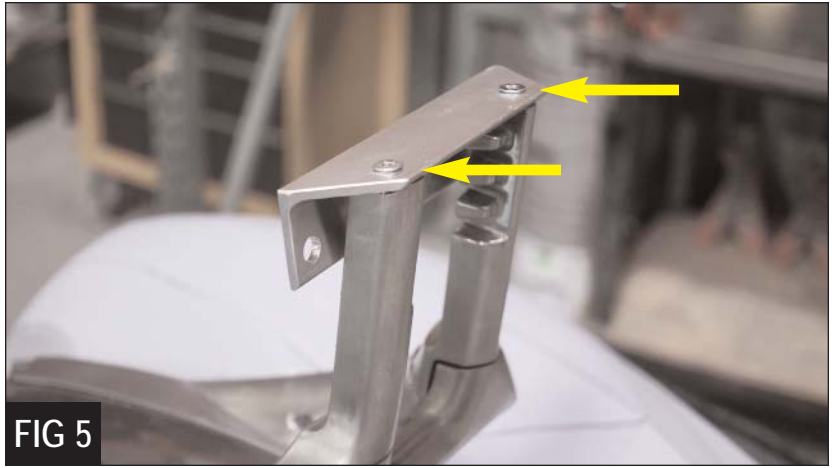


FIG 5



FIG 6



FIG 7



FIG 8

Questions? Give us a holler...
800-223-4332
tech@corbin.com