

Part Number: T-TB-S-9-FAIR

Fitment: 2014-2017 Triumph Thunderbird Storm

Revision: 1

Corbin

Tools Required	Parts List
8mm Allen wrench Loctite® or similar thread lock. REMOVABLE STRENGTH	1 #A01281 Corbin top mounting bracket 1 #A01282 Corbin lower left mounting bracket 1 #A01283 Corbin lower right mounting bracket 6 #SP00265 3/8" Flat washers 2 #SP00248 8mm x 16 x 1.25 Chrome Allen bolts 2 #SP00297 8mm Lock washers 4 #SP00973 8mm x 40 x 1.25 Chrome Allen bolts 4 #SP00215 5/16" Flat washers

NOTE: Cover the tank to help prevent from scratching.

NOTE: It may also be helpful to have a second set of hands to help hold the fairing in position during the last step.

NOTE: We highly recommend using a removable strength thread lock product, such as Loctite® on the bolts when installing your fairing.

1. Using a 8mm Allen wrench, remove the bolts on the handlebars (*Figure 1*).

2. Then add three provided washers on to each bolt (*Figure 2*).

3. Rest the handlebars on the tank and remove the rubber bushings on the triple clamp and set them aside.

4. Place the Corbin bracket on top of the triple clamp and under the cables. Put the rubber bushings back in place (*Figure 3*). Place the handlebars on top of the rubber bushings and secure with the stock bolts and the three provided washers on each bolt (*Figure 4*). Use Loctite® and tighten to 12 ft. lbs.



5. Next install the lower brackets on to the lower triple clamp using the provided Allen bolts and split lock washers (*Figure 5*). Do not tighten yet, just hand snug for now.

6. You are now ready to place the fairing and attach it to the brackets. You can most likely position the fairing and have it sit by itself while you bolt it on, but we think it's a good idea to have a friend help, just to guard from scratching the new paint.

7. Install the fairing by securing it with the supplied 8mm Allen bolts and 5/16" flat washers in each of the four positions (*Figures 6 & 7*). Don't forget to use Loctite®.

8. Go back and tighten all the bolts.



FIG 4



FIG 5

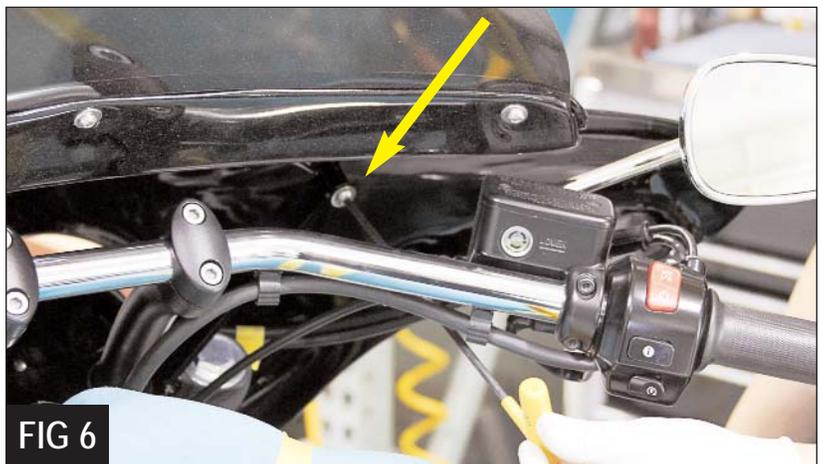


FIG 6

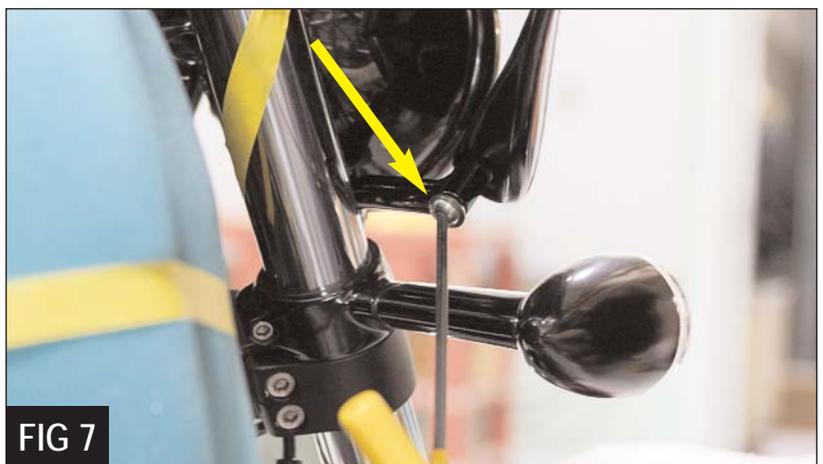


FIG 7

Questions? Give us a holler...
800-223-4332
tech@corbin.com