

**Part Number:** Z-DSRX-GL(E)

**Description:** Heated Gunfighter & Lady Saddle


**Fitment:** 2023 Zero DSR/X

**Revision:** 1



Tools Required	Parts List
	1 Wiring Harness

1. Start by removing the stock seat. See your owners manual if necessary.
2. Route the Corbin pigtail under the frame and down towards the OEM harness (*Figures 1 & 2*).
3. Connect the Corbin pigtail to OEM harness (*Figure 2*).
4. Plug the wiring pigtail on the Corbin saddle into the wiring harness you just installed. Flip the switch on the saddle. If the switch illuminates, the saddle heater is working.
5. To install your Gunfighter & Lady Saddle by sliding the rear in place and lowering the seat into position, align the Corbin latch pin to the stock bracket and push down on the saddle until you hear the lock click (*Figure 3*).

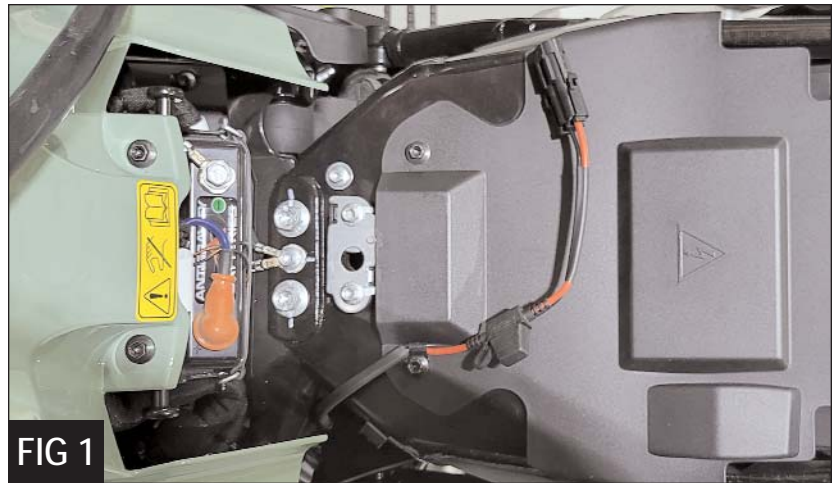

Questions? Give us a holler...  
**800-223-4332**  
tech@corbin.com