Part Number: D-MULTI-V2-26(E)
Description: Canyon Dual Sport Saddle
Fitment: 2026 Ducati Multistrada V2
Revision: 1

Tools Required	Parts List
Needlenose pliers	1 #CB-PWR-HRN-36=12" Wiring Harness / pigtail 1 #FACC-05 Small Fuse Adapter

1. Begin by removing the stock seat (refer to owner's manual).

2. Saddle mounts just like stock with brackets preinstalled on the saddle.

3. To install your Canyon Dual Sport saddle, slip the front bracket of your saddle under the rear of the gas tank, align the Corbin locking pin to the stock locking mechanism and push down on the saddle until you hear the lock click. *(Figure 1)*


FIG 1

HEATER INSTALLATION:

1. If you ordered the heated model, we also included a wiring pigtail that hooks into your stock fusebox, so start by removing the ignition panel by pulling up on the front and slide forward *(Figure 2)*. Next, unlatching the fusebox cover


FIG 2

2. Using needlenose pliers, remove the 10 amp fuse from the KEYS ACCESSORY/SW position and insert the fuse into the adapter at the end of the wiring pigtail *(Figure 3 & 4)*.


FIG 3


FIG 4

3. Insert the adapter into the fusebox in the space previously occupied by the KEYS ACCESSORY/SW fuse.

4. Close the fusebox with the stock cover.

5. Pop off the front part of the middle panel *(Figure 5)*.

6. Next, pop off the lower part of the front panel *(Figure 6)*.

7. Connect wiring adapters together *(Figure 7)*.

8. Route the wiring pigtail down the side of the tank *(Figure 8)* and out towards the rear of the tank *(Figure 9)*.

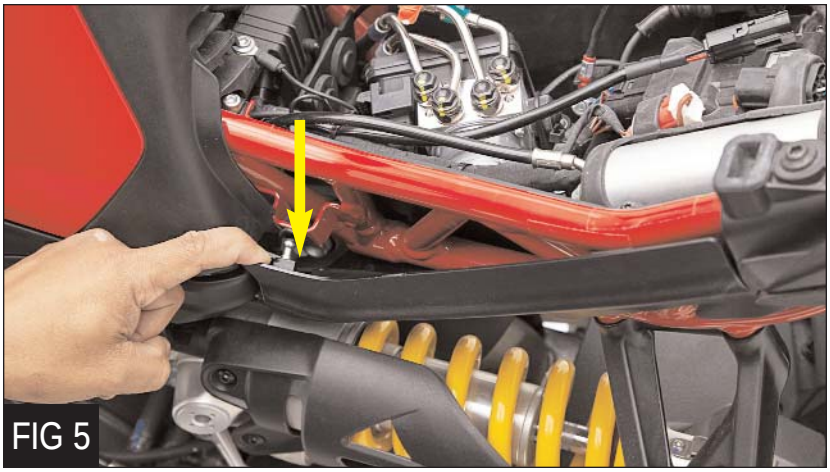
9. Find a convenient place to ground the negative lead of the pigtail to your chassis. We used the spot shown in *Figure 10*, but any location with good contact to ground will work fine.

10. Plug the wiring harness into the seat and test. To do this, just flip the switch on the saddle. If the switch illuminates, the saddle heater is working.

11. Proceed with saddle mounting as outlined above.

Enjoy your new saddle!

NOTE: The heater is controlled by the switch along the side of the saddle. The temperature is regulated by an internal thermostat when the heater switch is turned on.


FIG 5

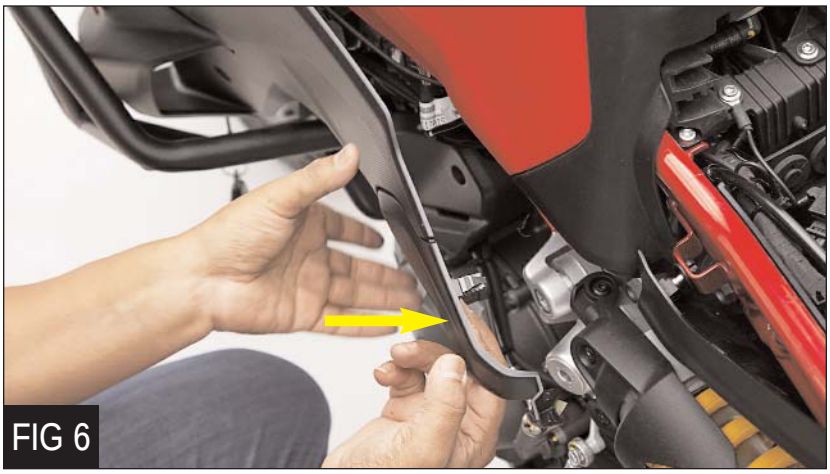

FIG 6


FIG 7


FIG 8


FIG 9


FIG 10

Questions? Give us a holler...
800-223-4332
tech@corbin.com